

LAMP OPERATION

HOW TO OPERATE EVE®

BATTERY STATUS

LAMP IS SWITCHED OFF

Brief press
on the button

The indicator LED on the side of the base indicates the status of the battery

100% 50% < 30%

The indicator LED (on the side) flashes green 5 times to indicate the shut down



LAMP IS SWITCHED OFF

Long press
on the button



Blinking orange
MANUAL Mode



Blinking blue
INNLED Mode



Blinking green
LUMENRADIO® Mode

Release Button

Release Button

Release Button

Switches on
on the last
programmed colour
(COLBASE)

Switches on
on the last
programmed colour
(COLBASE)

INNLED MODE ACTIVE
Remote controllable
LAKO XL or INNLED
transmitter

LUMENRADIO® MODE ACTIVE
Remote controllable any
Lumenradio® transmitter

Brief press Long Press

Change
Brightness

Long press

Long press


SHUT DOWN

The indicator LED (on the side) flashes green 5 times to indicate the shut down



CHANGING THE BASE COLOUR

COLBASE

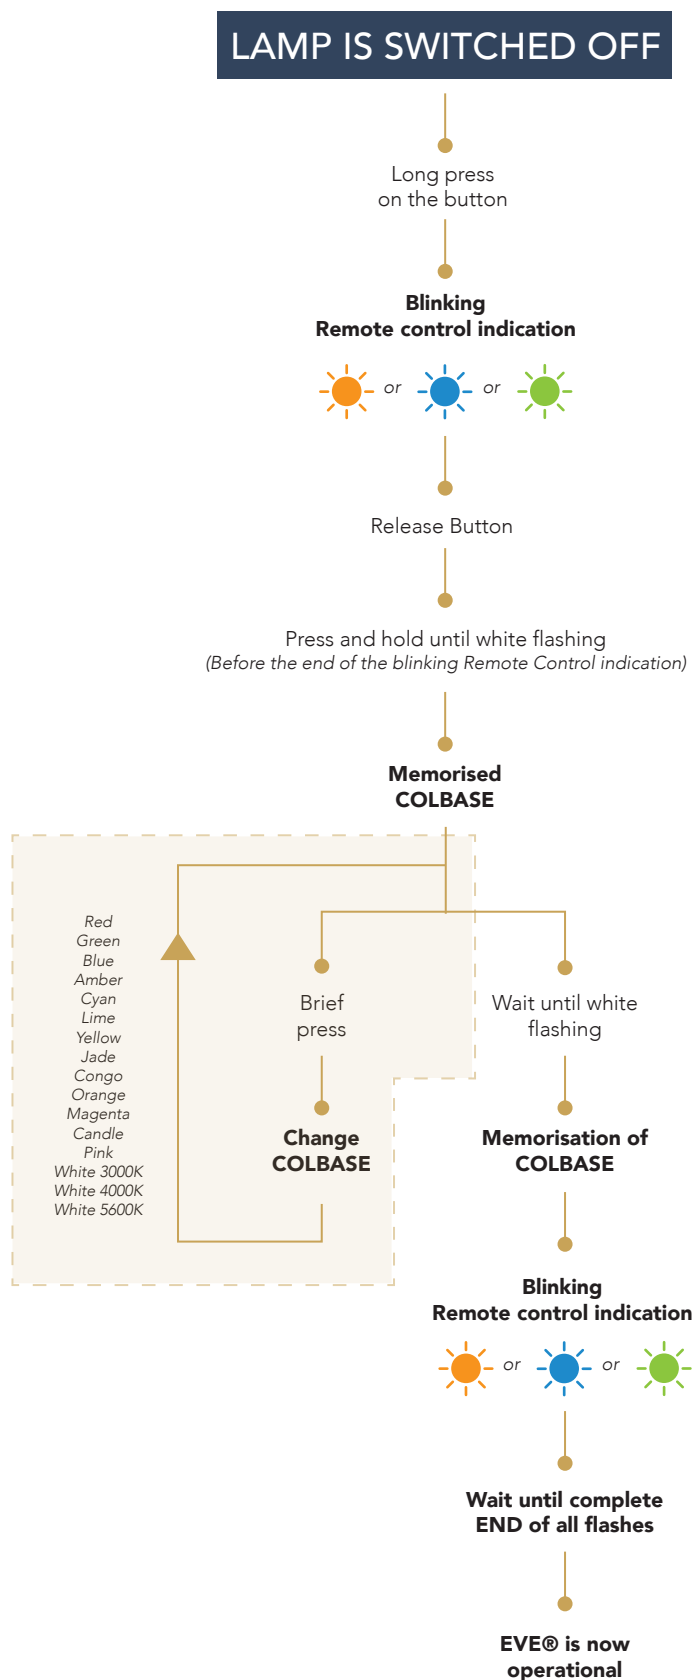

CHANGING THE REMOTE CONTROL MODE

MANUAL, INNLED OR LUMENRADIO®

LAMP IS SWITCHED OFF

