




## USER MANUAL

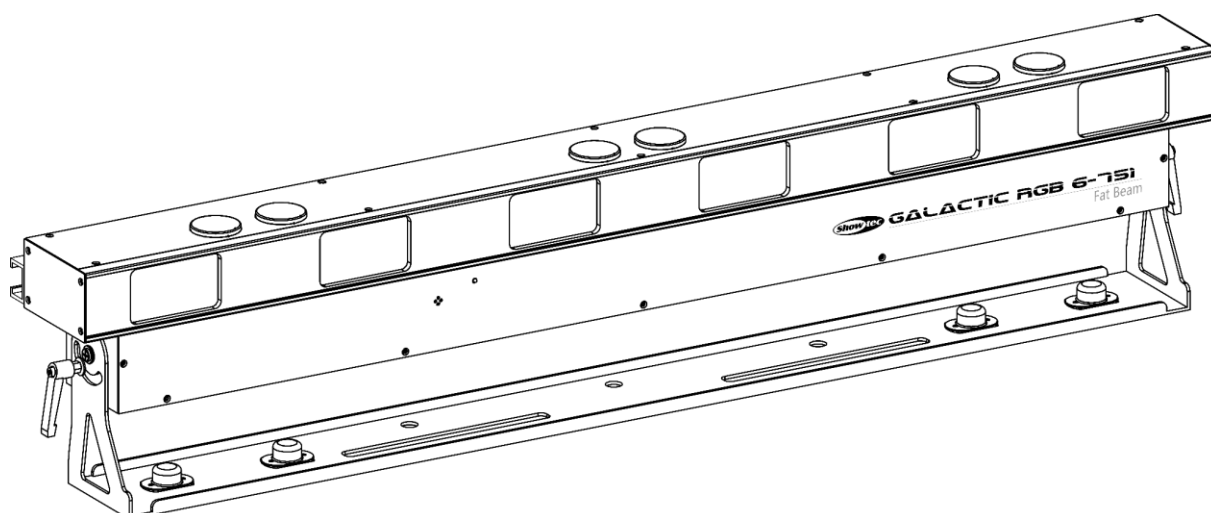

ENGLISH

# Galactic RGB-6-751

# V1

Product code: 51348

## Preface

---

Thank you for purchasing this Showtec product.

The purpose of this user manual is to provide instructions for the correct and safe use of this product.

Keep the user manual for future reference as it is an integral part of the product. The user manual shall be stored at an easily accessible location.

This user manual contains information concerning:

- Safety instructions
- Intended and non-intended use of the device
- Installation and operation of the device
- Maintenance procedures
- Troubleshooting
- Transport, storage and disposal of the device

Non-observance of the instructions in this user manual may result in serious injuries and damage of property.

©2023 Showtec. All rights reserved.

No part of this document may be copied, published or otherwise reproduced without the prior written consent of Highlite International.

Design and product specifications are subject to change without prior notice.

For the latest version of this document or for other language versions, please visit our website [www.highlite.com](http://www.highlite.com) or contact us at [service@highlite.com](mailto:service@highlite.com).

Highlite International and its authorized service providers are not liable for any injury, damage, direct or indirect loss, consequential or economic loss or any other loss arising from the use of, or inability to use or reliance on the information contained in this document.

## Table of contents

<b>1. Introduction.....</b>	<b>4</b>
1.1. Before Using the Product .....	4
1.2. Intended Use .....	4
1.3. Product Lifespan.....	4
1.4. Text Conventions .....	4
1.5. Symbols and Signal Words.....	5
1.6. Labels.....	5
<b>2. Safety .....</b>	<b>6</b>
2.1. Warnings and Safety Instructions .....	6
2.2. Requirements for the User.....	8
2.3. Laser Safety .....	9
2.4. Safety Devices .....	9
2.5. Personal Protective Equipment .....	9
<b>3. Description of the Device .....</b>	<b>10</b>
3.1. Front View .....	10
3.2. Back View .....	10
3.3. Product Specifications .....	11
3.4. Dimensions.....	12
<b>4. Installation .....</b>	<b>13</b>
4.1. Safety Instructions for Installation .....	13
4.2. Personal Protective Equipment .....	14
4.3. Installation Site Requirements .....	14
4.4. Rigging .....	14
4.4.1. Angle Adjustment.....	15
4.4.2. Connecting Multiple Devices.....	15
4.5. Connecting to Power Supply.....	17
4.6. Power Linking of Multiple Devices.....	17
<b>5. Setup .....</b>	<b>18</b>
5.1. Warnings and Precautions .....	18
5.2. Stand-alone Setup .....	18
5.3. DMX Connection.....	18
5.3.1. DMX-512 Protocol.....	18
5.3.2. DMX Cables.....	19
5.3.3. Master/Slave Setup .....	19
5.3.4. DMX Linking.....	20
5.3.5. DMX Addressing.....	20
<b>6. Operation .....</b>	<b>21</b>
6.1. Safety Instructions for Operation .....	21
6.2. Control Modes .....	21
6.3. Control Panel .....	22
6.4. Starting the Device .....	22
6.5. Menu Overview .....	23
6.6. Main Menu Options .....	25
6.6.1. Auto Mode.....	25
6.6.2. Sound Mode.....	26
6.6.3. Manual Mode .....	28
6.6.4. DMX Mode.....	29
6.6.5. Slave Mode.....	31
6.6.6. Setup .....	31
6.7. DMX Channels .....	33
6.7.1. 7 Channels, 9 Channels.....	33
6.7.2. 12 Channels.....	34
6.7.3. 36 Channels.....	36

- 6.7.4. 48 Channels .....37
- 6.7.5. 54 Channels .....38
- 6.7.6. 66 Channels .....40
  - 6.7.6.1. Pattern Selection Chart.....42
- 7. Troubleshooting .....43**
- 8. Maintenance .....44**
  - 8.1. Safety Instructions for Maintenance .....44
  - 8.2. Preventive Maintenance .....44
    - 8.2.1. Basic Cleaning Instructions .....44
  - 8.3. Corrective Maintenance .....45
    - 8.3.1. Replacing the Fuse.....45
- 9. Deinstallation, Transportation and Storage .....46**
  - 9.1. Instructions for Deinstallation.....46
  - 9.2. Instructions for Transportation .....46
  - 9.3. Storage .....46
- 10. Disposal .....46**
- 11. Approval.....46**

## 1. Introduction

### 1.1. Before Using the Product



#### Important

Read and follow the instructions in this user manual before installing, operating or servicing this product.

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual.

After unpacking, check the contents of the box. If any parts are missing or damaged, contact your Highlite International dealer.

Your shipment includes:

- Showtec Galactic RGB-6-751
- Schuko to Power Pro cable – 1,3 m
- Remote interlock test connector
- 2 keys for key switch
- User manual

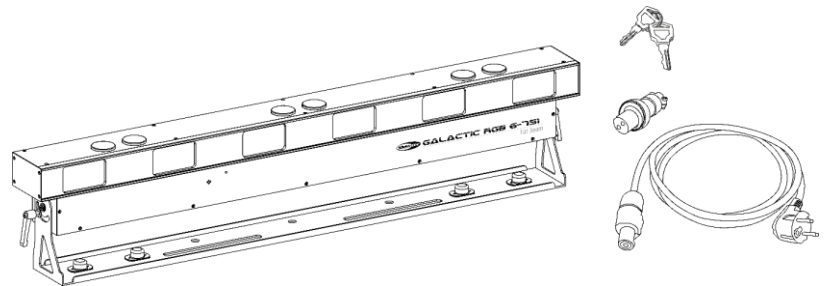


Fig. 01

### 1.2. Intended Use

This device is intended for professional use as a laser projector to produce laser displays or show effects. It is suitable only for indoor installation. This device is not suitable for households.

Any other use, not mentioned under intended use, is regarded as non-intended and incorrect use.

### 1.3. Product Lifespan

This device is not designed for permanent operation. Disconnect the device from the electrical power supply when the device is not in operation. This will reduce the wear and will improve the device's lifespan.

### 1.4. Text Conventions

Throughout the user manual the following text conventions are used:

- Buttons: All buttons are in bold lettering, for example "Press the **UP/DOWN** buttons"
- References: References to chapters and parts of the device are in bold lettering, for example: "Refer to **2. Safety**", "turn the **adjustment screw (02)**"
- 0–255: Defines a range of values
- Notes: **Note:** (in bold lettering) is followed by useful information or tips

### 1.5. Symbols and Signal Words

Safety notes and warnings are indicated throughout the user manual by safety signs.

Always follow the instructions provided in this user manual.



**DANGER**

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



**WARNING**

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



**CAUTION**

Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.



**Attention**

Indicates important information for the correct operation and use of the product.



**Attention**

Indicates that eye protection must be used.



**Important**

Read and observe the instructions in this document.



**Electrical hazard**




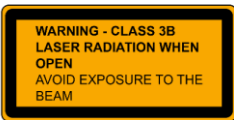

**Laser beam hazard**



Provides important information about the disposal of this product.

### 1.6. Labels

This device is a class 3B laser device and is provided with the following labels and hazard warnings. Refer to Fig. 02 for the position of the labels.

- 1   **WARNING**  
Class 3B laser radiation when open  
Avoid exposure to the beam
- 2  **WARNING**  
Avoid exposure – laser radiation is emitted from this aperture

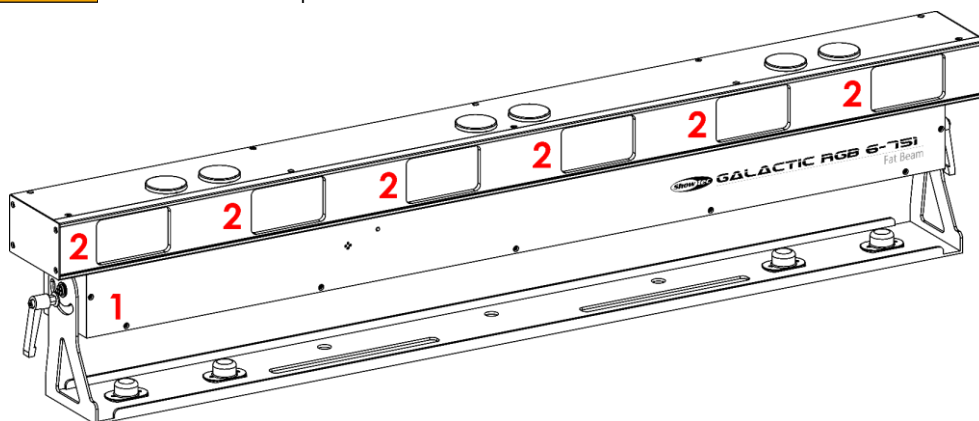


Fig. 02

## 2. Safety



### Important

**Read and follow the instructions in this user manual before installing, operating or servicing this product.**

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual.

### 2.1. Warnings and Safety Instructions



#### DANGER

**Danger for children**

For adult use only. The device must be installed beyond the reach of children.

- Do not leave various parts of the packaging (plastic bags, polystyrene foam, nails, etc.) within children's reach. Packaging material is a potential source of danger for children.



#### DANGER

**Electric shock caused by dangerous voltage inside**

There are areas within the device where dangerous touch voltage may be present.

- Do not open the device or remove any covers.
- Do not operate the device if the covers or the housing is open. Before operation, check if the housing is firmly closed and all screws are tightly fastened.
- Disconnect the device from electrical power supply before service and maintenance, and when the device is not in use.



#### DANGER

**Electric shock caused by short-circuit**

This device falls under IEC protection class I.

- Make sure that the device is electrically connected to ground (earth). Connect the device only to a socket-outlet with ground (earth) connection.
- Do not cover the ground (earth) connection.
- Do not bypass the thermostatic switch or fuses.
- For replacement use fuses of the same type and rating only.
- Do not let the power cable come into contact with other cables. Handle the power cable and all connections with the mains with caution.
- Do not modify, bend, mechanically strain, put pressure on, pull or heat up the power cable.
- Make sure that the power cable is not crimped or damaged. Examine the power cable periodically for any defects.
- Do not immerse the device in water or other liquids. Do not install the device in a location where flooding may occur.
- Do not use the device during thunderstorms. Disconnect the device from the electrical power supply immediately.



**WARNING**  
**Laser radiation**  
**Avoid exposure to beam.**

This device is a class 3B laser device according to the classification in NEN-EN-IEC 60825-1:2014. It emits visible radiation in the wavelength range 400–700 nm. Exposure to the direct or reflected laser beam, including accidental short term exposure, is hazardous to the eye. Focused laser beam can cause minor skin injuries.

Check all applicable national and international regulations concerning laser safety before using this device. The user is responsible for the safety of all persons present during the use of the laser device.

- Do not look into the laser beam.
- Do not expose users of telescopic optics, such as binoculars, to this device.
- Do not open the device and do not modify the device.
- Do not use the device if the housing or the optics are damaged.
- Do not point the laser beam at people or animals.
- Make sure that the beam is terminated on a non-reflective and non-combustible surface.
- Do not point the laser beam at reflective surfaces such as windows, mirrors and shiny metal.
- Do not operate the device without supervision.



**Attention**  
**Risk of fire**

If the beam is continuously pointed at one place from a close distance, the laser beam can burn materials.

- Do not point the laser beam at materials susceptible to burning.



**Attention**  
**Power supply**

- Before connecting the device to the power supply, make sure that the current, voltage and frequency match the input voltage, current and frequency specified on the information label on the device.
- Make sure that the cross-sectional area of the extension cords and power cables is sufficient for the required power consumption of the device.



**Attention**  
**General safety**

- Do not insert objects into the air vents.
- Do not connect the device to a dimmer pack.
- Do not switch the device on and off in short intervals. This decreases the device's life.
- Do not shake the device. Avoid brute force when installing or operating the device.
- If the device is dropped or struck, disconnect the device from the electrical power supply immediately.
- If the device is exposed to extreme temperature variations (e.g. after transportation), do not switch it on immediately. Let the device reach room temperature before switching it on, otherwise it may be damaged by the formed condensation.



- If the device fails to work properly, discontinue the use immediately.



**Attention**  
**For professional use only**  
**This device shall be used only for the purposes it is designed for.**

This device is designed to be used as a professional laser projector. Any incorrect use may lead to hazardous situations and result in injuries and material damage.

- This device is not suitable for households.
- This device is not designed for permanent operation.
- This device does not contain user-serviceable parts. Unauthorized modifications to the device will render the warranty void. Such modifications may result in injuries and material damage.



**Attention**  
**Before each use, examine the device visually for any defects.**

Make sure that:

- All screws used for installing the device or parts of the device are tightly fastened and are not corroded.
- The safety devices are not damaged.
- There are no deformations on housings, fixations and installation points.
- The lens is not cracked or damaged.
- The power cables are not damaged and do not show any material fatigue.



**Attention**  
**Do not expose the device to conditions that exceed the rated IP class conditions.**

This device is IP20 rated. IP (Ingress Protection) 20 class provides protection against solid objects greater than 12 mm, such as fingers, and no protection against harmful ingress of water.

## 2.2. Requirements for the User

This product may be used only by instructed or skilled persons. Installation and maintenance can be carried out by instructed or skilled persons. Service shall be carried out only by skilled persons. Contact your Highlite International dealer for more information.

This product may not be used by ordinary persons. Users, operators and installers should have received sufficient training in laser safety to be able to accurately assure that the maximum permissible exposure (MPE) is not exceeded in spectator occupied areas and that the required separations are maintained between spectators and projections that exceed the MPE.

Instructed persons have been instructed and trained by a skilled person, or are supervised by a skilled person, for specific tasks and work activities associated with the operation, installation, service and maintenance of this product, so that they can identify risks and take precautions to avoid them.

Skilled persons have training or experience, which enables them to recognize risks and to avoid hazards associated with the operation, installation, service and maintenance of this product.

Ordinary persons are all persons other than instructed persons and skilled persons.

## 2.3. Laser Safety

**CAUTION**

**Use of controls or adjustments, or performance of procedures, other than those specified in this manual, may result in hazardous radiation exposure.**

Check all applicable national and international regulations concerning laser safety before using this device. In some countries, there may be specific requirements, such as government permissions or notifications of shows, or prohibitions, such as against laser scanning of spectators without appropriate safeguards.

Laser displays and shows, where class 3B and/or class 4 lasers are used, should be supervised by a laser safety officer (LSO). LSOs are trained to evaluate and control laser hazards and are responsible for overseeing the control of laser hazards. An LSO is recommended but not required for laser displays and shows, where only class 1, 1M, 2, 2M and/or 3R lasers are used.

During laser displays and shows the applicable eye and skin maximum permissible exposure (MPE) may not be exceeded. Under no circumstance should any person be exposed to laser radiation exceeding the applicable eye and skin MPE. MPE for spectators, ancillary personnel and performers is specified in IEC 60825-14, IEC 60825-3, and in the applicable local laser regulations.

Each time before operation of the device, make sure that:

- The beam is aligned and properly terminated
- All controls, including scan failure safeguards and emergency stop controls, are properly working
- Warning signs and barriers are in place as appropriate
- All components are securely mounted and locked into position

The device should be secured and protected against misalignment or maladjustment between alignment completion and the beginning of the laser display or show.

## 2.4. Safety Devices

This device is equipped with a key switch and a remote interlock connector. The key switch prevents that unauthorized and untrained persons can operate the device. If the key is removed, you cannot operate the device.

The remote interlock connector permits the connection of a remote interlock (not supplied). When you press the remote interlock, the laser radiation is terminated immediately. We recommend that you purchase a remote interlock. Check the local regulations, as in some countries it is not allowed to operate the device without a remote interlock.

For testing and programming purposes you may use the supplied test connector. If the test connector is not inserted into the remote interlock connector, you cannot operate the device.

## 2.5. Personal Protective Equipment

**Attention**

**Use laser protective eyewear during alignment and setup.**

Wearing of laser protective eyewear is recommended for Class 3B lasers. Make sure you follow any applicable national and site-specific regulations.

During alignment and setup use protective eyewear that complies with the requirements of EN 208. In all other cases laser protective eyewear must be in compliance with EN 207.

### 3. Description of the Device

The Showtec Galactic RGB-6-751 is a laser projector with high output and great effects.

#### 3.1. Front View

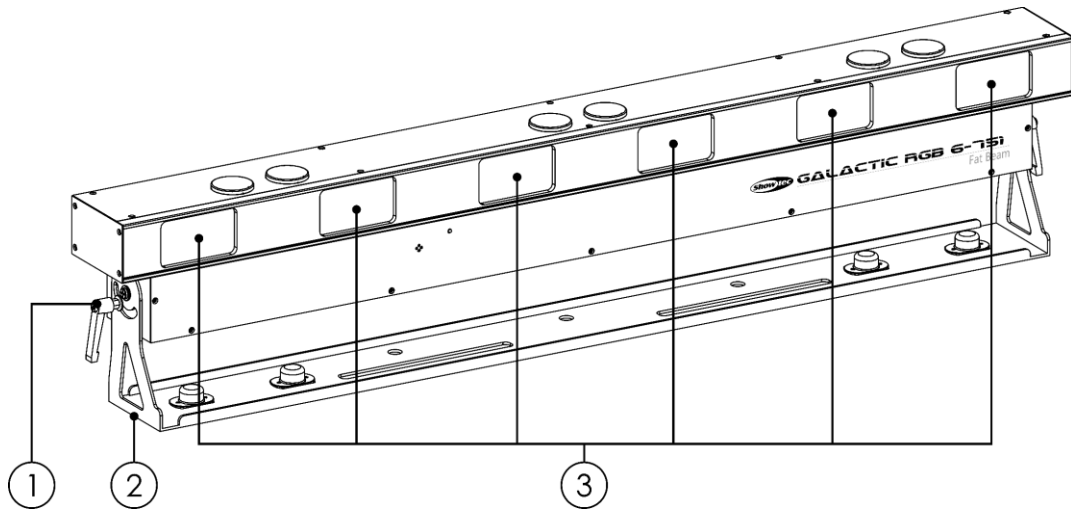


Fig. 03

- 01) 2 x adjustment screw
- 02) Mounting bracket
- 03) 6 x laser beam aperture

#### 3.2. Back View

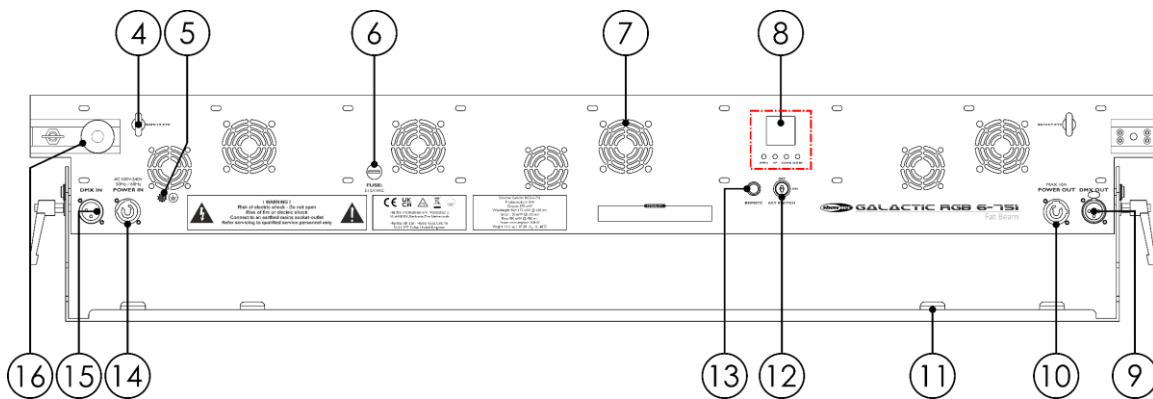


Fig. 04

- 04) Safety eye
- 05) Ground (earth) connection
- 06) Fuse 5KT3,15AL/250 V
- 07) Air vent
- 08) Control panel: LCD display + control buttons
- 09) 3-pin DMX connector OUT
- 10) Power Pro connector OUT (Gray)
- 11) 4 x Mounting holes for 2 quick-lock brackets
- 12) Key switch (ON/OFF)
- 13) Remote interlock connector
- 14) Power Pro connector IN (Blue)
- 15) 3-pin DMX connector IN
- 16) Connection mechanism

### 3.3. Product Specifications

Model:	Galactic RGB-6-751	
<b>Electrical:</b>		
Input voltage:	100–240 V AC, 50/60 Hz	
Power consumption:	108 W	
Fuse:	5KT3,15AL/250 V	
<b>Physical:</b>		
Dimensions:	1000 x 135 x 200 mm (LxWxH)	
Weight:	11,5 kg	
<b>Laser:</b>		
Laser class:	3B	
Laser power:	638 nm = 175 mW (red) 515 nm = 50 mW (green) 450 nm = 450 mW (blue)	
Beam diameter at aperture:	18 mm	
Beam divergence:	1,5 mrad	
NOHD:	153 m (P total output power all beams = 480 mW)	
MPE:	25 W·m <sup>-2</sup> for exposure duration of 0,25 s	
<b>Operation and control:</b>		
Control:	Stand-alone (auto, color, sound-controlled) Master/Slave (auto, color, sound-controlled) DMX-512	
DMX channels:	7, 9, 12, 36, 48, 54, 66 channels	
Control panel:	LCD display + control buttons	
<b>Connections:</b>		
Power connections:	Power Pro connectors (Blue) IN/(Gray) OUT, 100–240 V	
Data connections:	3-pin DMX connectors IN/OUT	
Signal pinouts:	pin 1 (ground), pin 2 (-), pin 3 (+)	
<b>Construction:</b>		
Housing:	Metal and flame-retardant plastic	
Color:	Black	
IP rating:	IP20	
Cooling:	Cooling fan	
<b>Thermal:</b>		
Maximum ambient temperature $t_a$ :	40 °C	
Minimum ambient temperature:	0 °C	

3.4. Dimensions

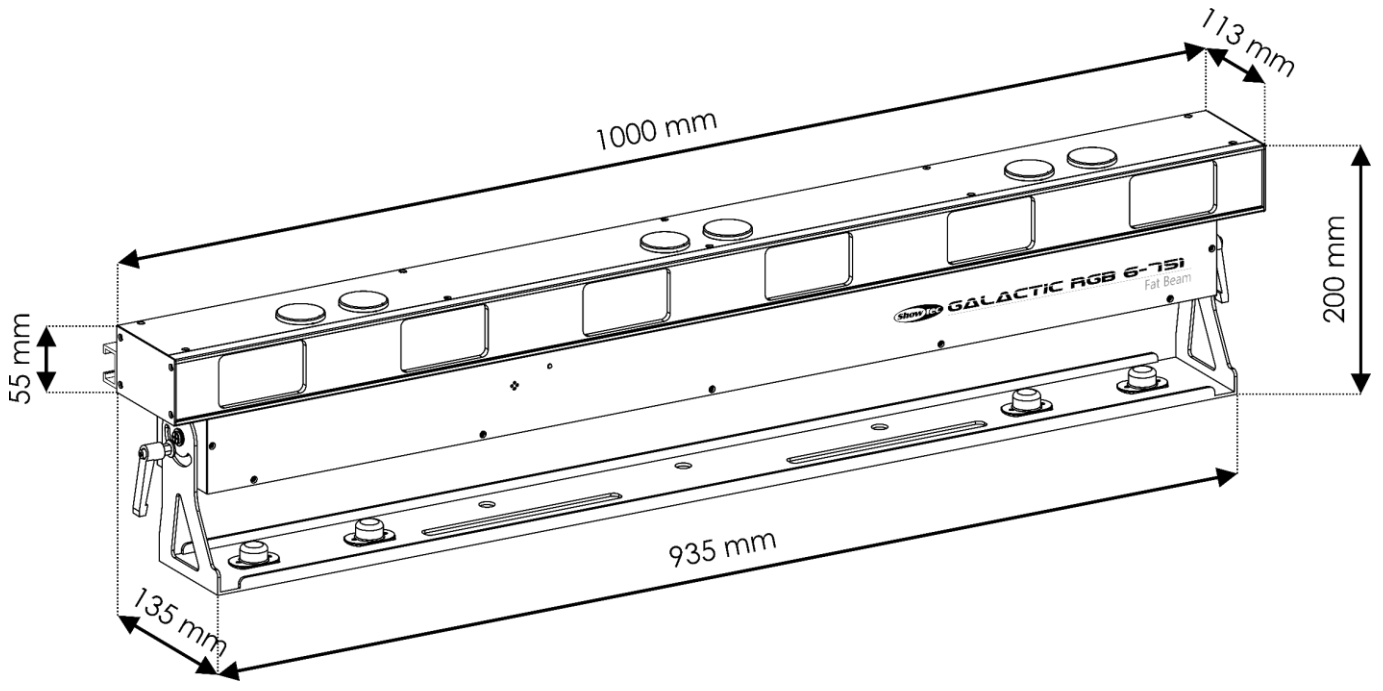


Fig. 05

## 4. Installation

### 4.1. Safety Instructions for Installation



#### WARNING

Incorrect installation can cause serious injuries and damage of property.

If trussing systems are used, installation must be carried out only by instructed or skilled persons.

- Make sure that the device is rigidly mounted to prevent movement due to vibration or jarring.
- Follow all applicable European, national and local safety regulations concerning rigging and trussing.

The device should be installed in such a way that there is at least 3 m distance in height and 2,5 m laterally between the laser beam that exceeds the spectator MPE and the surface where spectators are expected to stand.

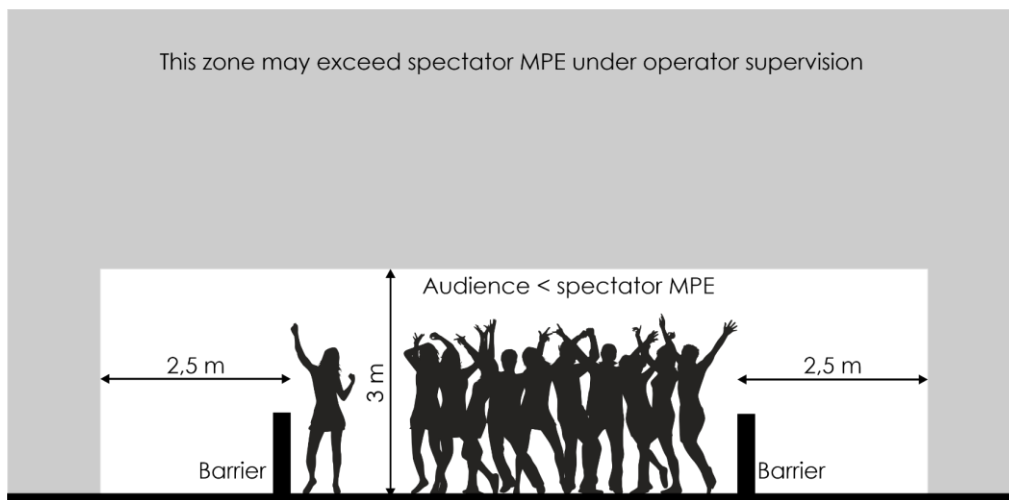


Fig. 06

If the laser display or show is not under the continuous control of an operator who can immediately terminate laser radiation in the event of a problem, the MPE shall not exceed 5 times the spectator MPE in the space between 3 m and 6 m above the surface where spectators are expected to stand.

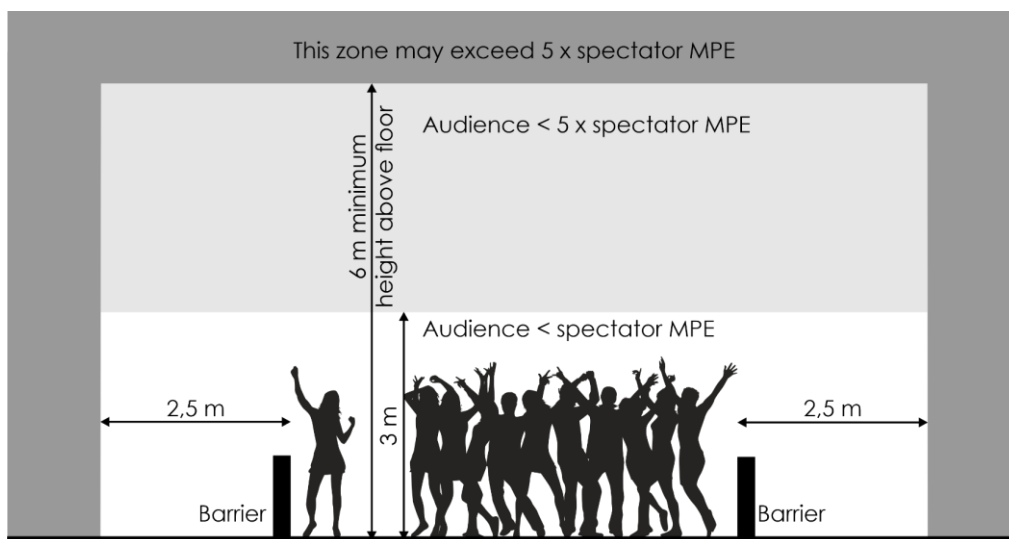


Fig. 07

## 4.2. Personal Protective Equipment

During installation and rigging wear personal protective equipment in compliance with the national and site-specific regulations.

## 4.3. Installation Site Requirements

- The device can be used only indoors.
- The minimum distance to other objects must be bigger than 0,5 m.
- The maximum ambient temperature  $t_a = 40\text{ °C}$  must never be exceeded.
- The relative humidity must not exceed 50 % with an ambient temperature of 40 °C.

## 4.4. Rigging

The device can be positioned on a flat surface or mounted to a truss or other rigging structure. Make sure that all loads are within the pre-determined limits of the supporting structure.



### CAUTION

Restrict the access under the work area during rigging and/or derigging.

To mount the device, follow the steps below:

- 01) Use quick-lock brackets to attach the device to the supporting structure, as shown in Fig. 08. Make sure that the device cannot move freely.
- 02) Secure the device with a secondary suspension, for example a safety cable. Make sure that the secondary suspension can hold 10 times the weight of the device. If possible, the secondary suspension should be attached to a supporting structure independent of the primary suspension. Put the safety cable through both **safety eyes (04)**, as shown in Fig. 08.

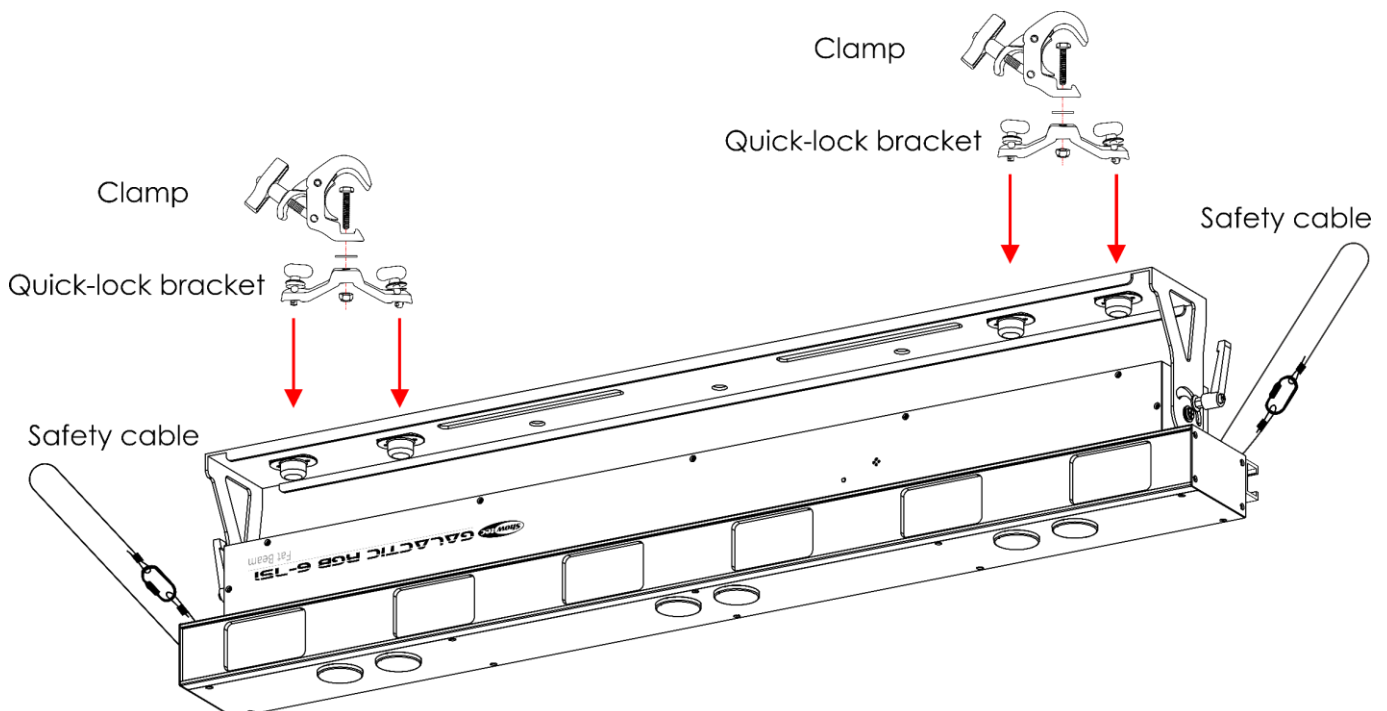


Fig. 08

#### 4.4.1. Angle Adjustment

You can adjust the angle of the device with the **adjustment screws (01)**.

- 01) Turn the **adjustment screws (01)** counterclockwise to release them.
- 02) Tilt the device at the desired angle (see Fig. 09).
- 03) Turn the **adjustment screws (01)** clockwise to tighten them. Make sure that the device cannot move freely after the **adjustment screws (01)** are tightened.

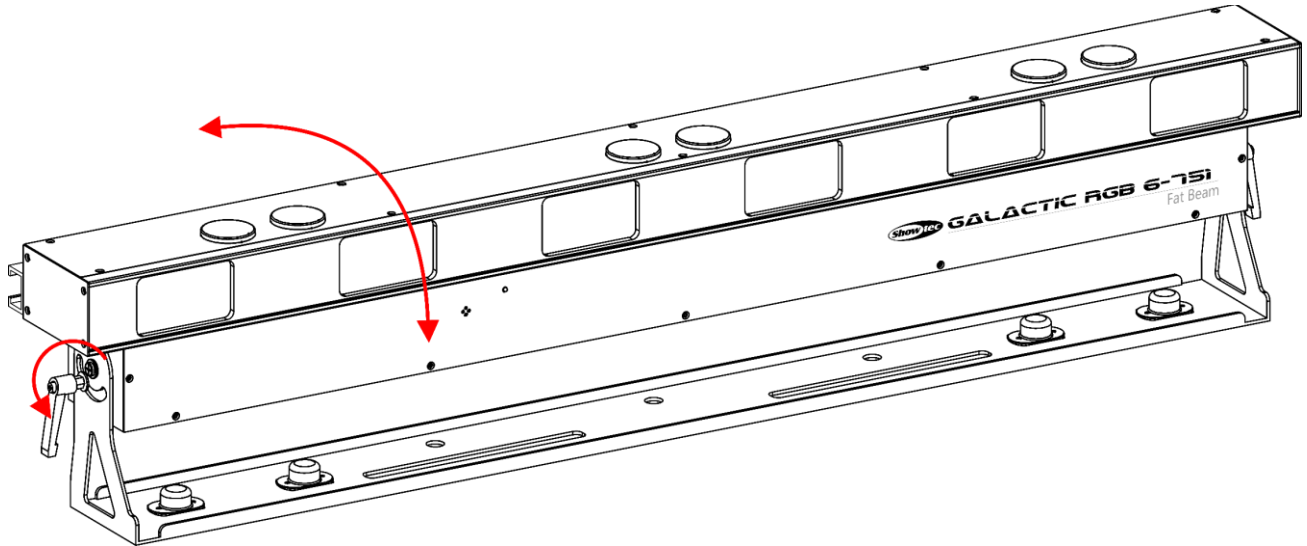


Fig. 09

#### 4.4.2. Connecting Multiple Devices

To connect horizontally 2 devices, follow the steps below:

- 01) Place the devices next to each other, as shown in Fig. 10.

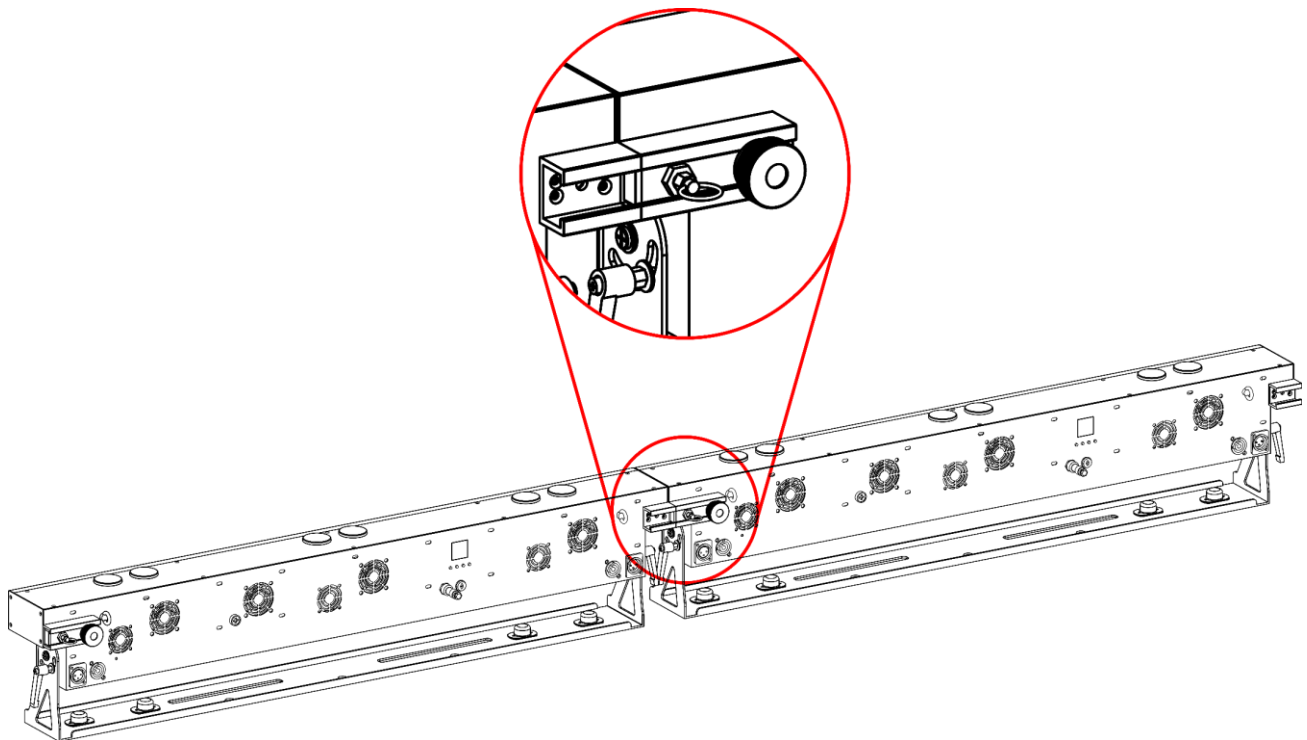


Fig. 10



- 02) Loosen the adjustment screw counterclockwise on the connection mechanism (16), as shown in Fig. 11.

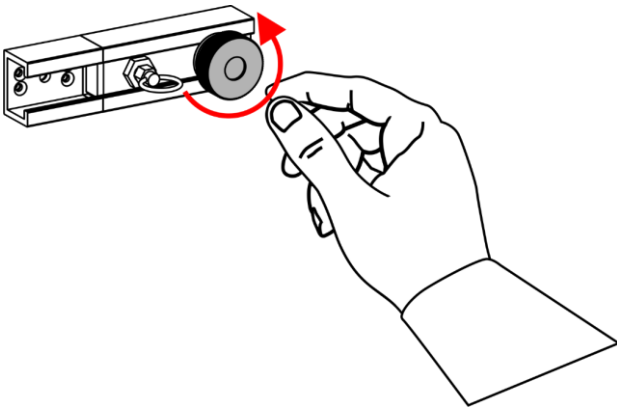


Fig. 11

- 03) Pull the locking pin of the connection mechanism (16) towards you and slide the connection mechanism (16) onto the rail of the next device, as shown in Fig. 12 and 13. The red circle in Fig. 12 indicates the locking position for the locking pin.

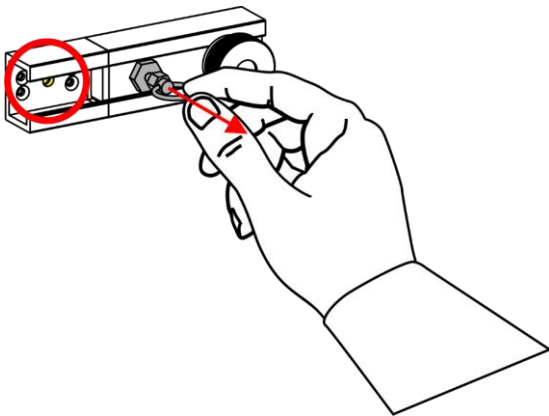


Fig. 12

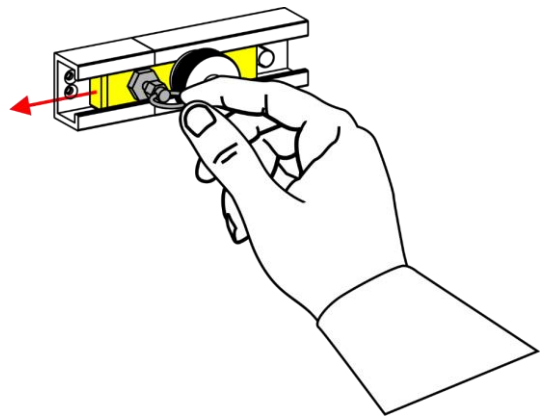


Fig. 13

- 04) Release the locking pin of the connection mechanism (16) in the designated hole (red circle Fig.12), as shown in Fig. 14.
- 05) Tighten the adjustment screw clockwise on the connection mechanism (16), as shown in Fig. 15. Make sure that the device cannot move freely after the **adjustment screws (01)** are tightened.

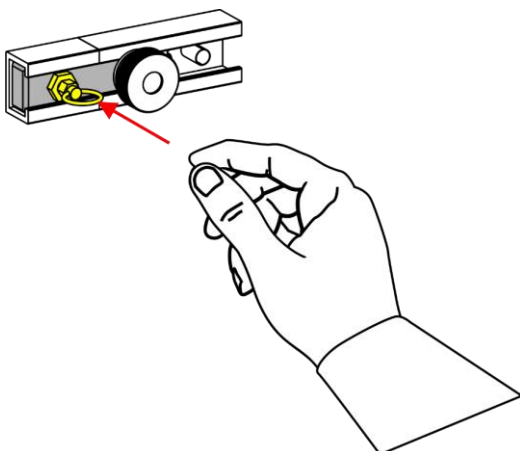


Fig. 14

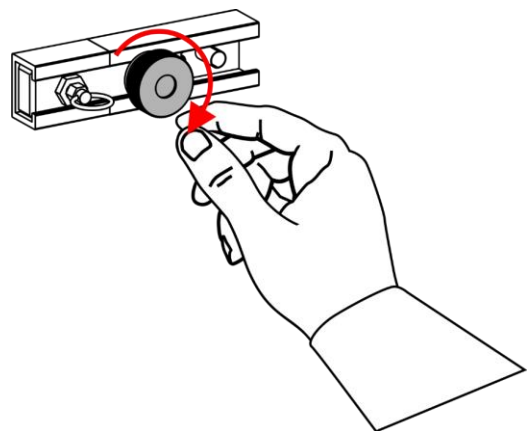


Fig. 15

## 4.5. Connecting to Power Supply



**DANGER**  
Electric shock caused by short-circuit

The device accepts AC mains power at 100–240 V and 50/60 Hz. Do not supply power at any other voltage or frequency to the device.

This device falls under IEC protection class I. Make sure that the device is always electrically connected to the ground (earth).

Before connecting the device to the socket-outlet:

- Make sure that the power supply matches the input voltage specified on the information label on the device.
- Make sure that the socket-outlet has ground (earth) connection.

Connect the device to the socket-outlet with the power plug. Do not connect the device to a dimmer circuit, as this may damage the device.

## 4.6. Power Linking of Multiple Devices

This device supports power linking. Power can be relayed to another device via the power OUT connector. Note that the input and the output connectors have different designs: one type cannot be connected to the other.

Power linking of multiple devices must be carried out only by instructed or skilled persons.



**WARNING**  
Incorrect power linking may lead to overload of the electrical circuit and result in serious injuries and damage of property.

To prevent overload of the electrical circuit, when power linking multiple devices:

- Use cables with sufficient current-carrying capacity. The power cable supplied with the device is not suitable for power linking of multiple device.
- Make sure that the total current draw of the device and all connected devices does not exceed the rated capacity of the power cables and the circuit breaker.
- Do not link more devices on one power link than the maximum recommended number.

Maximum recommended number of devices:

- at 100–120 V: 8 devices
- at 200–240 V: 16 devices

## 5. Setup

### 5.1. Warnings and Precautions



**WARNING**  
Laser radiation  
Avoid exposure to beam.



**Attention**  
Use laser protective eyewear during alignment and setup.

During alignment and setup the access of unauthorized persons to the area, where the laser radiation exceeds the spectator MPE, must be restricted. The temporary laser controlled area must be marked accordingly.

Follow all applicable national and site-specific regulations regarding laser safety.

### 5.2. Stand-alone Setup

When the Galactic RGB-6-751 is not connected to a controller or to other devices, it functions as a stand-alone device. It can be operated manually with the control panel, the keyboard, or the remote control.

### 5.3. DMX Connection



**Attention**  
Connect all data cables before supplying power.  
Disconnect power supply before connecting or disconnecting data cables.

#### 5.3.1. DMX-512 Protocol

You need a DMX serial data link to run light shows of one or more devices using a DMX-512 controller or to run synchronized shows of two or more devices set in a master/slave operating mode.

The Galactic RGB-6-751 has 3-pin DMX signal IN and OUT connectors.

The pin assignment is as follows:

- 3-pin: pin 1 (ground), pin 2 (-), pin 3 (+)

Devices on a serial data link must be daisy-chained in a single line. The number of devices that you can control on one data link is limited by the combined number of the DMX channels of the connected devices and the 512 channels available in one DMX universe.

To comply with the TIA-485 standard, no more than 32 devices should be connected on one data link. In order to connect more than 32 devices on one data link, you must use a DMX optically isolated splitter/booster, otherwise this may result in deterioration of the DMX signal.

**Note:**

- Maximum recommended DMX data link distance: 300 m
- Maximum recommended number of devices on a DMX data link: 32 devices

### 5.3.2. DMX Cables

Shielded twisted-pair cables with 3-pin/5-pin XLR connectors must be used for reliable DMX connection. You can purchase DMX cables directly from your Highlite International dealer or make your own cables.

If you use XLR audio cables for DMX data transmission, this may lead to signal degradation and unreliable operation of the DMX network.

When you make your own DMX cables, make sure that you connect the pins and wires correctly as shown in Fig. 16.

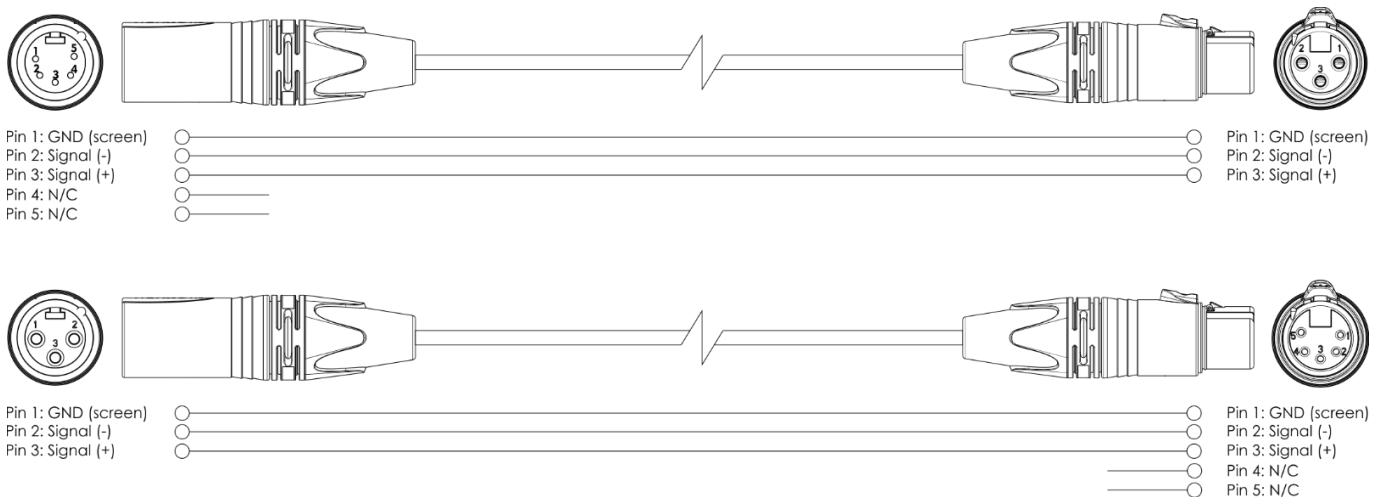


Fig. 16

### 5.3.3. Master/Slave Setup

The Galactic RGB-6-751 supports master/slave control mode. To connect multiple devices in a master/slave setup, follow the steps below:

- 01) Connect the first device's DMX OUT connector to the second device's DMX IN connector with a 3-pin DMX cable.
- 02) Repeat step 1 to connect all devices as shown in Fig. 17.
- 03) Connect a DMX terminator (120  $\Omega$  resistor) to the DMX OUT connector of the last device in the setup.
- 04) Set the first device on the data link as a master device. See **6.6.5. Master/Slave Mode** on page 31 for more information.
- 05) Set the remaining devices as slave devices. See **6.6.5. Master/Slave Mode** on page 31 for more information.

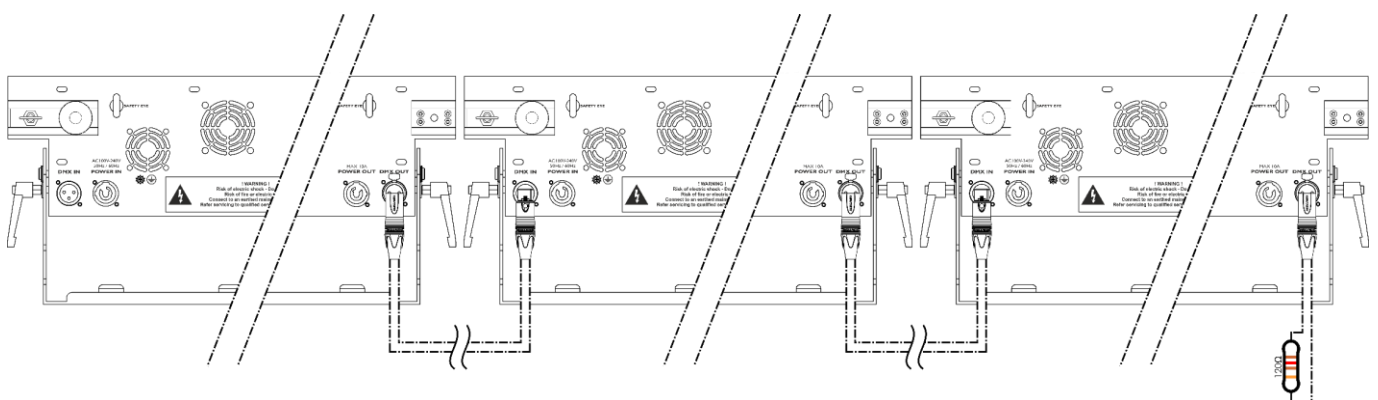


Fig. 17

### 5.3.4. DMX Linking

To connect multiple devices on one DMX data link, follow the steps below:

- 01) Use a 3-pin DMX cable to connect the DMX OUT connector of the lighting controller to the DMX IN connector of the first device.
- 02) Connect the first device's DMX OUT connector to the second device's DMX IN connector with a 3-pin DMX cable.
- 03) Repeat step 2 to connect all devices in a daisy-chain as shown in Fig. 18.
- 04) Connect a DMX terminator (120  $\Omega$  resistor) to the DMX OUT connector of the last device on the data link.

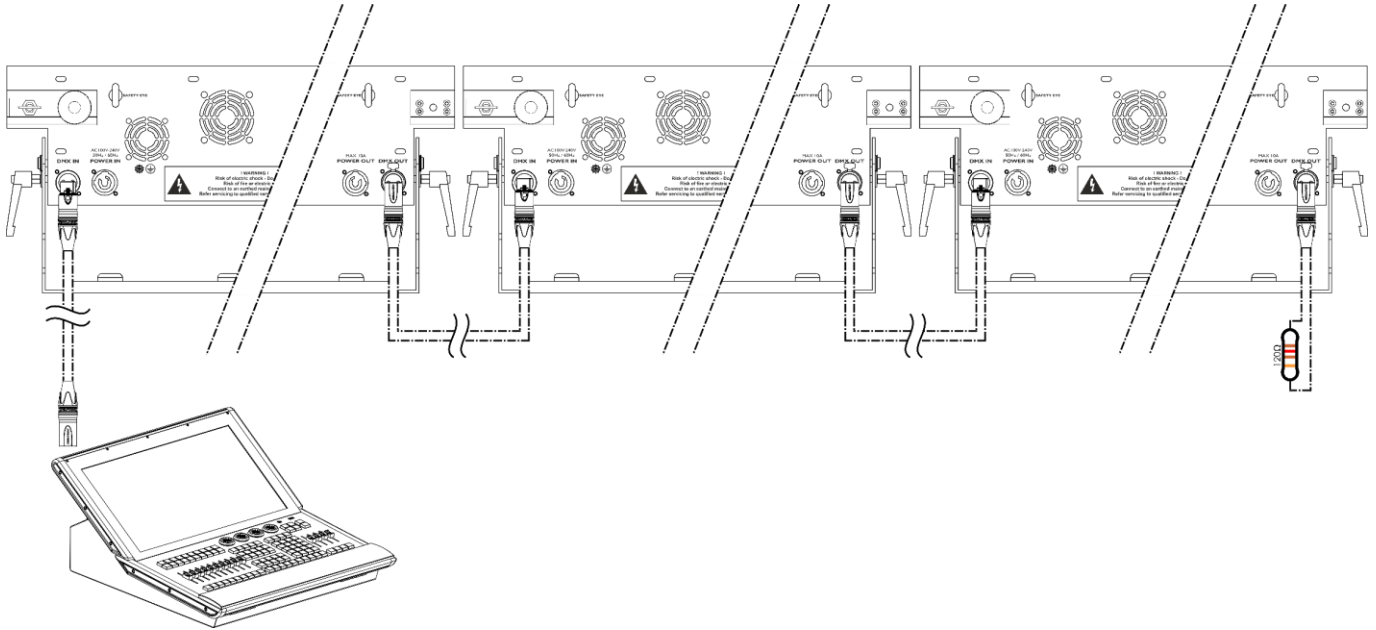


Fig. 18

### 5.3.5. DMX Addressing

In a setup with multiple devices, make sure that you set the DMX starting address of each device correctly. The Galactic RGB-6-751 has 7 personalities: 7 channels, 9 channels, 12 channels, 36 channels, 48 channels, 54 channels and 66 channels.

If you want to connect multiple devices on one data link, follow the steps below:

- 01) Set the starting address of the 1<sup>st</sup> device on the data link to 1 (001).
- 02) Set the starting address of the 2<sup>nd</sup> device on the data link to 67 (067), as  $1 + 66 = 67$ .
- 03) Set the starting address of the 3<sup>rd</sup> device on the data link to 133 (133), as  $67 + 66 = 133$ .
- 04) Continue assigning the starting addresses of the remaining devices by adding each time 66 to the previous number.

Make sure that you do not have any overlapping channels in order to control each Galactic RGB-6-751 correctly. If two or more devices are addressed similarly, they will work similarly.

## 6. Operation

### 6.1. Safety Instructions for Operation



**WARNING**  
**Laser radiation**  
**Avoid exposure to beam.**

This device is a class 3B laser device according to the classification in NEN-EN-IEC 60825-1:2014. The device can be operated only by instructed or skilled persons.

- Check all applicable national and international regulations concerning laser safety before operating this device.



**Attention**  
**This device must be used only for the purposes it is designed for.**

This device is intended for professional use as a laser projector to produce laser displays or show effects. It is suitable only for indoor installation. This device is not suitable for households.

Any other use, not mentioned under intended use, is regarded as non-intended and incorrect use.



**Attention**  
**Power supply**

Before connecting the device to the power supply, make sure that the current, voltage and frequency match the input voltage, current and frequency specified on the information label on the device.

### 6.2. Control Modes

The Galactic RGB-6-751 supports the following control modes:

- Stand-alone: Auto mode (built-in shows), color mode
- Master/Slave: Auto mode (built-in shows), color mode
- DMX-512: 7, 9, 12, 36, 48, 54, 66 channels

### 6.3. Control Panel

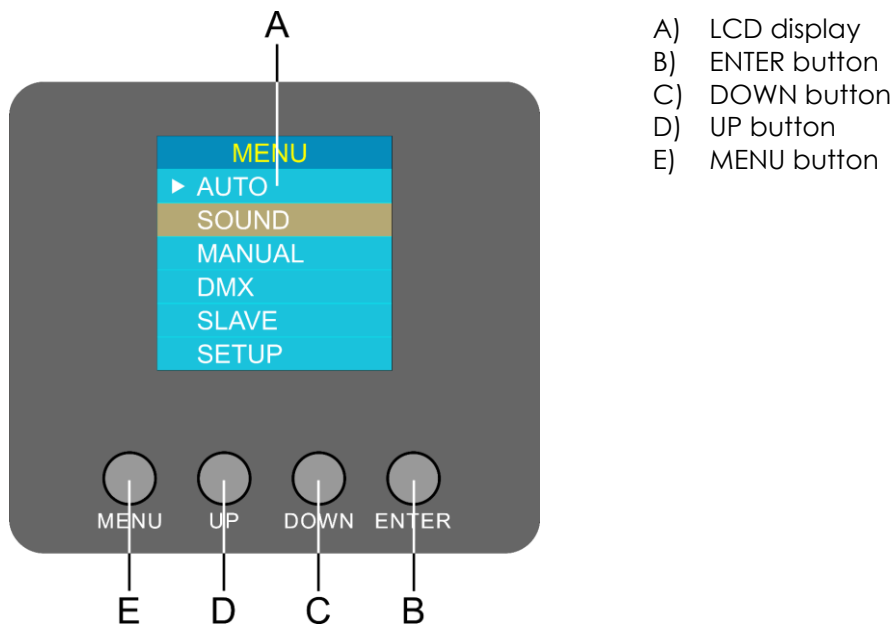


Fig. 19


- Use the **MENU** button to exit the current submenu, to return to the main menu and to navigate through the main menu.
- Use the **UP/DOWN** buttons to navigate through the menus or to increase/decrease numeric values.
- Use the **ENTER** button to open the desired menu, to confirm your choice or to set the currently selected value.

### 6.4. Starting the Device

- 01) Make sure that all laser safety measures are in place and working. See **2.3. Laser Safety** on page 9 for more information.
- 02) Connect all data cables, if applicable. See **5.3. DMX Connection** on pages 18–20 for more information.
- 03) Connect the remote interlock (or emergency switch) to the **remote interlock connector (13)**. See **2.4. Safety Devices** on page 9 for more information. For programming purposes you may use the supplied test connector.


#### Note:

- If the test connector is not inserted into the remote interlock connector, you cannot operate the device. The device will power up, but it will not produce a laser beam.
  - The remote interlock is not supplied. You can purchase a remote interlock from your Highlite International dealer. Check your local regulations, as in some countries it is not allowed to operate the device without a remote interlock.
- 01) Connect the device to the socket-outlet with the power plug. See **4.5. Connecting to Power Supply** on page 17 for more information. The display shows a splash screen with the current version of the firmware:

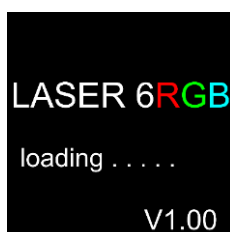


- 02) Insert the key into the **key switch (12)**. The device is now operational. Turn the **key switch (12)** to ON position to turn on the laser beam. See **2.4. Safety Devices** on page 9 for more information.

### 6.5. Menu Overview

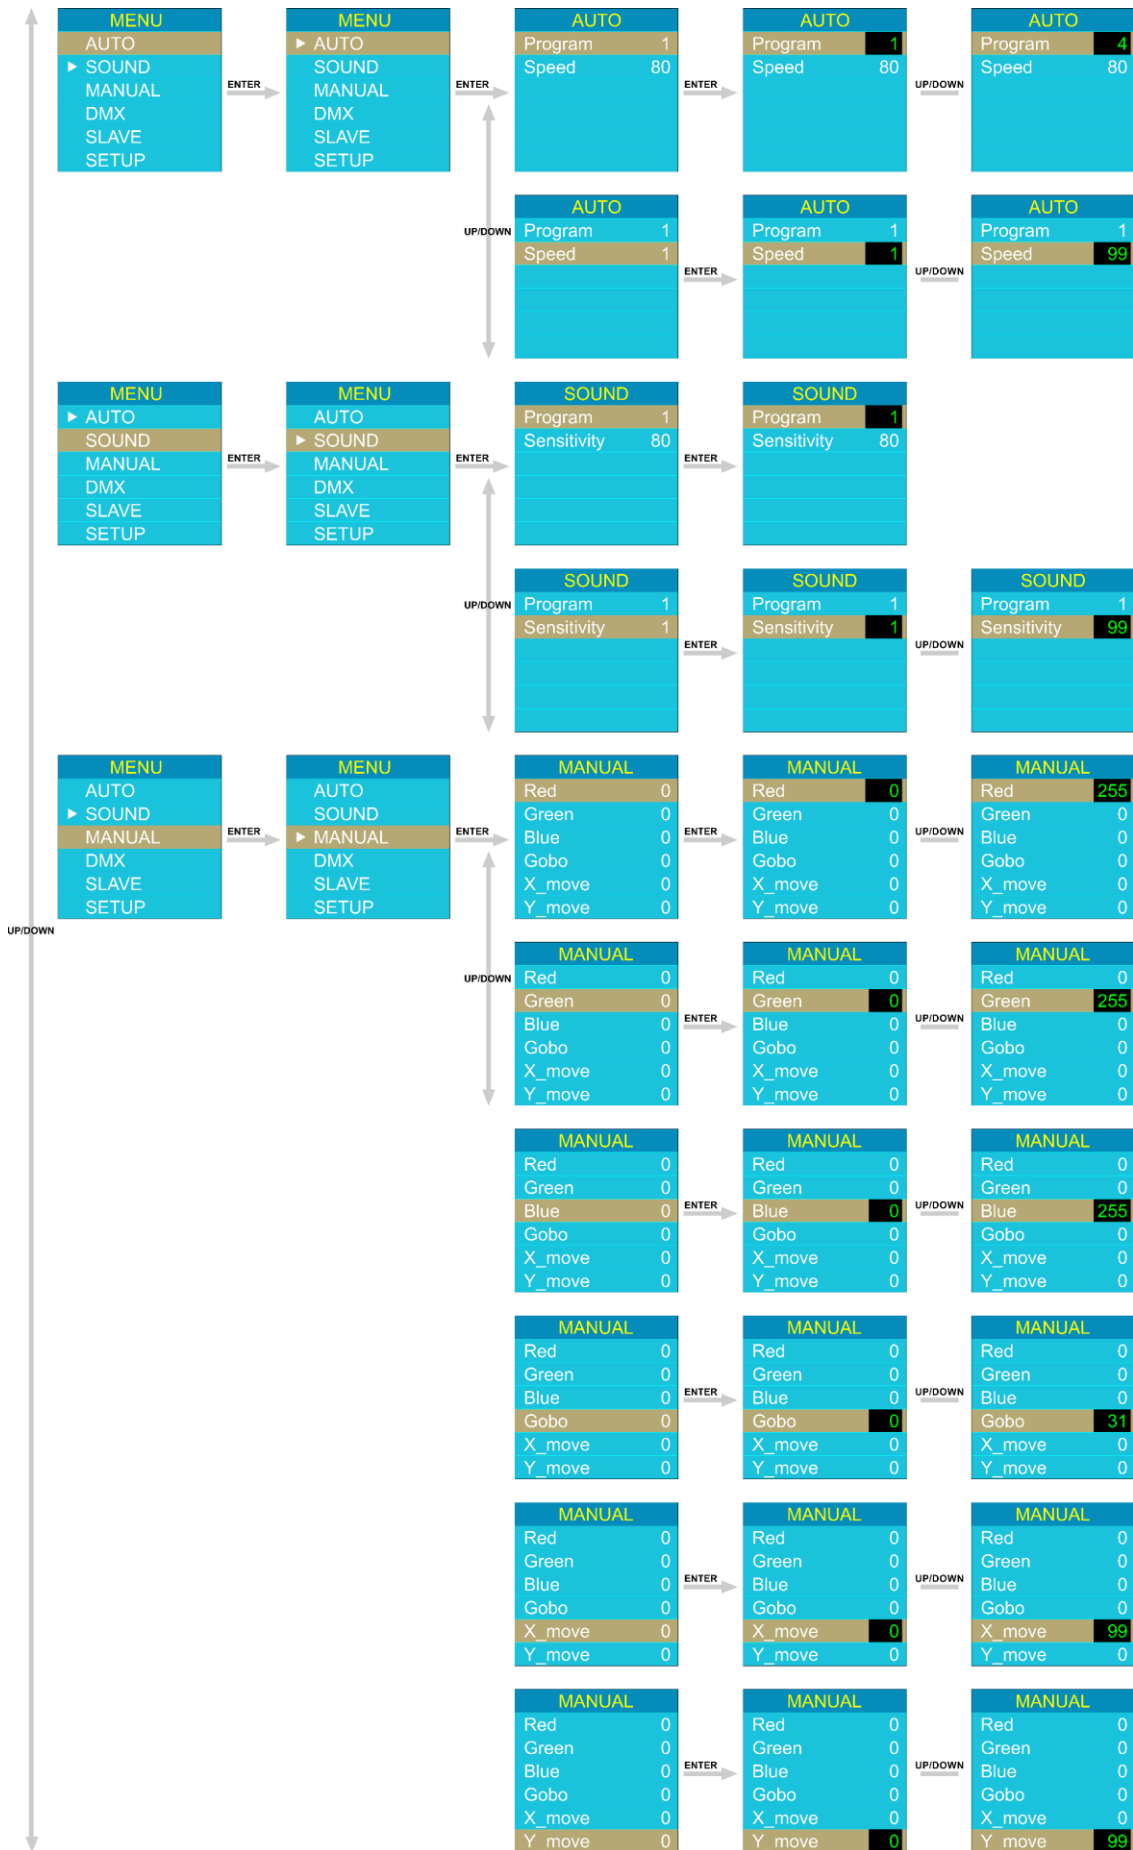




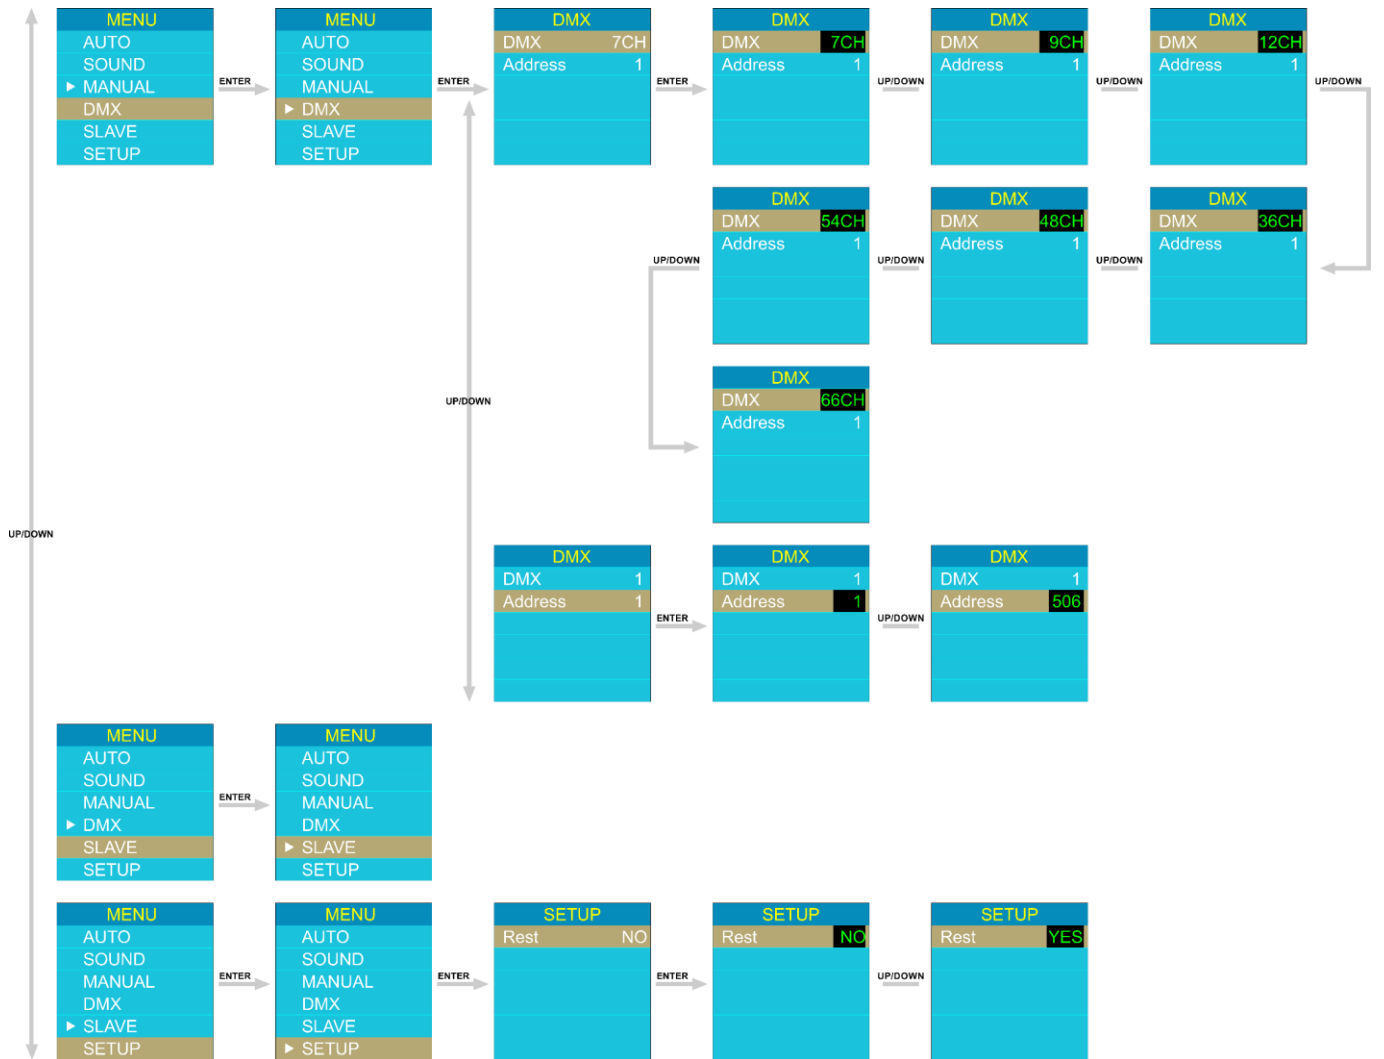

## 6.6. Main Menu Options

The main menu has the following options:

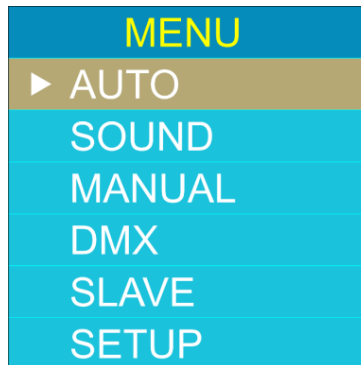

01) Press the **UP/DOWN** buttons to scroll through the following 6 main menu options:

- Auto: See **6.6.1. Auto Mode**
- Sound: See **6.6.2. Sound Mode**
- Manual: See **6.6.3. Manual mode**
- DMX: See **6.6.4. DMX Mode**
- Slave: See **6.6.5. Slave Mode**
- Setup: See **6.6.6. Setup**

02) Press the **ENTER** button to open the submenus.


If the device is not connected to a DMX controller, you can operate the device using the control panel.

If the laser beam is turned on, any changes are displayed in real time.


### 6.6.1. Auto Mode

In this menu you can set the Auto mode of the device.


01) Press the **UP/DOWN** buttons to select the Auto mode. The display shows:

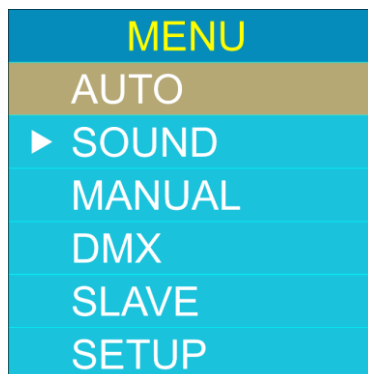

02) Press the **ENTER** button to select the Auto menu. The display shows:

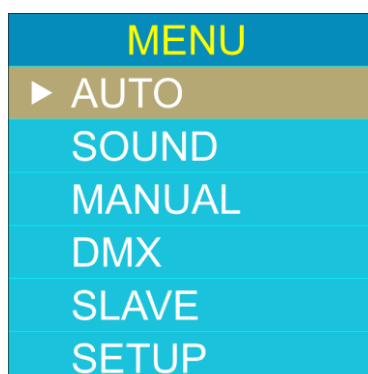


03) Press the **ENTER** button to open the submenu. The display shows:

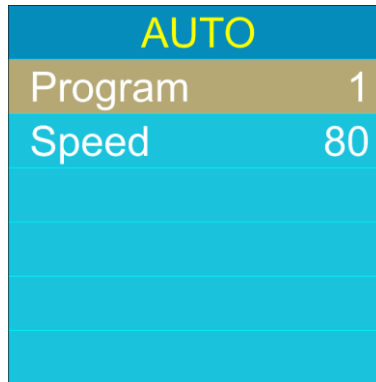

04) Press the **UP/DOWN** buttons to select one of 2 options:

- Program
- Speed

05) Press the **ENTER** button to open the submenu. The display shows:

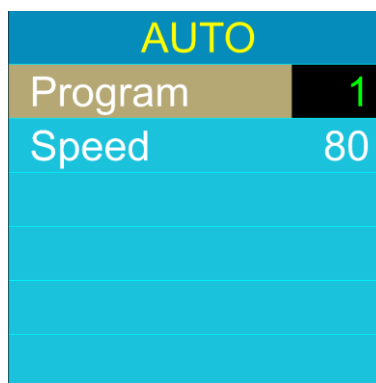

06) Press the **UP/DOWN** buttons to adjust the values:


- Program: The adjustment range is 1–4
- Speed: The adjustment range is 1–99, from slow to fast

07) Press the **ENTER** button to confirm.


### 6.6.2. Sound Mode

In this menu you can set the Sound mode of the device.


01) Press the **UP/DOWN** buttons to select the Sound mode. The display shows:

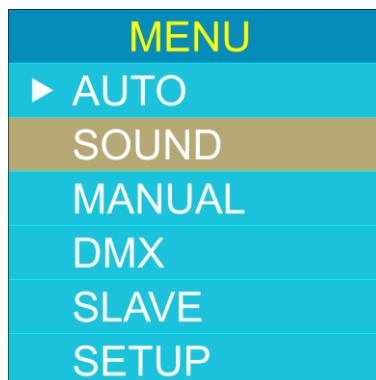

02) Press the **ENTER** button to select the Sound menu. The display shows

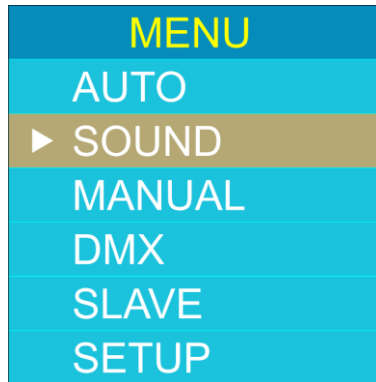


03) Press the **ENTER** button to open the submenu. The display shows:

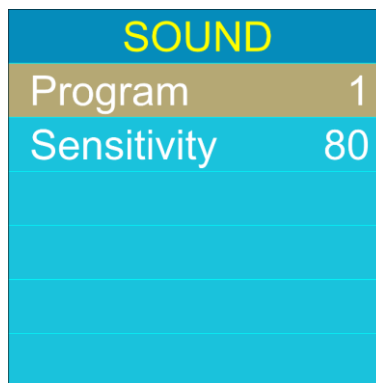

04) Press the **UP/DOWN** buttons to select one of 2 options:

- Program
- Sensitivity

05) Press the **ENTER** button to open the submenu. The display shows:

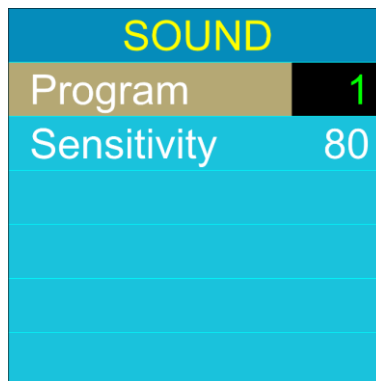

06) Press the **UP/DOWN** buttons to adjust the values:


- Program: The adjustment range is 1
- Sensitivity: The adjustment range is 1–99, from OFF to high sound sensitivity

07) Press the **ENTER** button to confirm.


## 6.6.3. Manual Mode

In this menu you can set the Manual mode of the device.

01) Press the **UP/DOWN** buttons to select the Manual mode. The display shows:

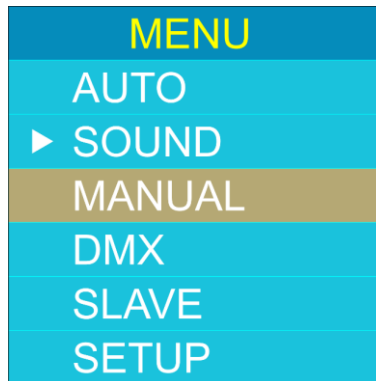

02) Press the **ENTER** button to select the Manual menu. The display shows

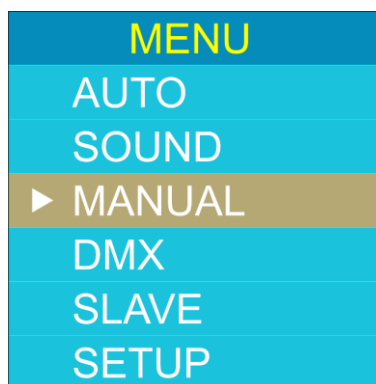

03) Press the **ENTER** button to open the submenu. The display shows:



04) Press the **UP/DOWN** buttons to select one of 6 options:

- Red
- Green
- Blue
- Gobo
- X\_move
- Y\_move

05) Press the **ENTER** button to open the submenu. The display shows:

MANUAL	
Red	0
Green	0
Blue	0
Gobo	0
X_move	0
Y_move	0

06) Press the **UP/DOWN** buttons to adjust the values:

- Red: The adjustment range is 0–255
- Green: The adjustment range is 0–255
- Blue: The adjustment range is 0–255
- Gobo: The adjustment range is 0–31
- X\_move: The adjustment range is 0–99
- Y\_move: The adjustment range is 0–99

07) Press the **ENTER** button to confirm.

#### 6.6.4. DMX Mode

In this menu you can select the desired DMX channel mode (personality) and set the DMX starting address of the device.

**Note:** If you exit DMX mode, the DMX connection will be discontinued and the device will not react to the DMX controller.


01) Press the **UP/DOWN** buttons to select the DMX mode. The display shows:

MENU	
AUTO	
SOUND	
▶ MANUAL	
DMX	
SLAVE	
SETUP	

02) Press the **ENTER** button to select the DMX menu. The display shows

MENU	
AUTO	
SOUND	
MANUAL	
▶ DMX	
SLAVE	
SETUP	


03) Press the **ENTER** button to open the submenu. The display shows:

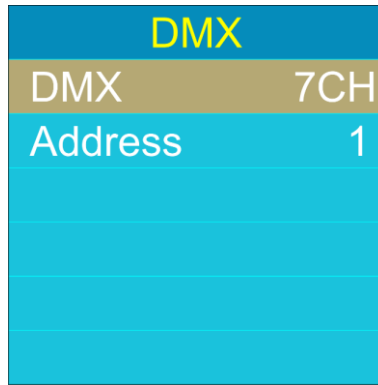

04) Press the **UP/DOWN** buttons to select one of 2 options:

- DMX
- Address

05) Press the **ENTER** button to open the submenu. The display shows:

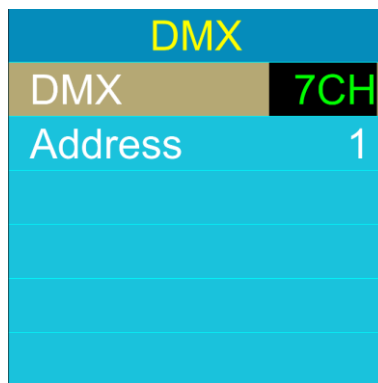

06) Press the **UP/DOWN** buttons to adjust the values:


- DMX: 7 CH, 9 CH, 12 CH, 36 CH, 48 CH, 54 CH, 66 CH
- Address: The adjustment range of the DMX addresses depends on the currently selected DMX channel mode:
  - 7-channel mode, 001–506
  - 9-channel mode, 001–504
  - 12-channel mode, 001–501
  - 36-channel mode, 001–477
  - 48-channel mode, 001–465
  - 54-channel mode, 001–459
  - 66-channel mode, 001–447

07) Press the **ENTER** button to confirm.


### 6.6.5. Slave Mode

In this menu you can set the device as a slave device in master/slave control mode.

01) Press the **UP/DOWN** buttons to select the Slave mode. The display shows:

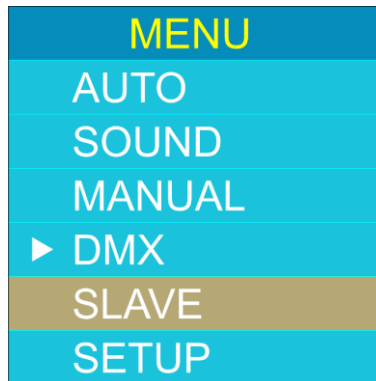

02) Press the **ENTER** button to select the Slave menu. The display shows

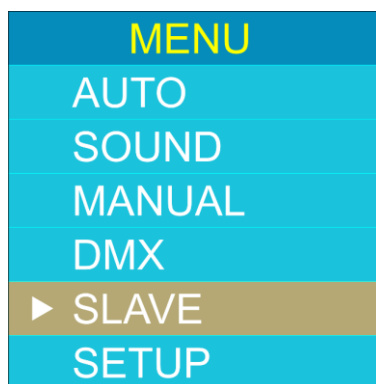


03) Press **ENTER** button to set the device as a slave device.

### 6.6.6. Setup


In this menu you can reset the device.

01) Press the **UP/DOWN** buttons to select the reset mode. The display shows:

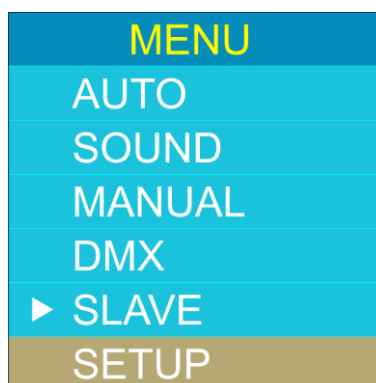



02) Press the **ENTER** button to select the reset menu. The display shows

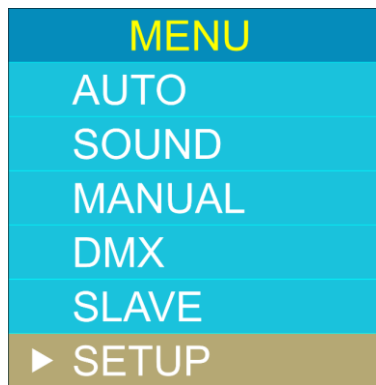

03) Press the **ENTER** button to open the submenu. The display shows:



04) Press the **ENTER** button to open the submenu. The display shows:



05) Press the **UP/DOWN** buttons to select:

- YES: Restore to factory default settings
- NO: Keep current settings, no factory reset

06) Press the **ENTER** button to confirm.

## 6.7. DMX Channels

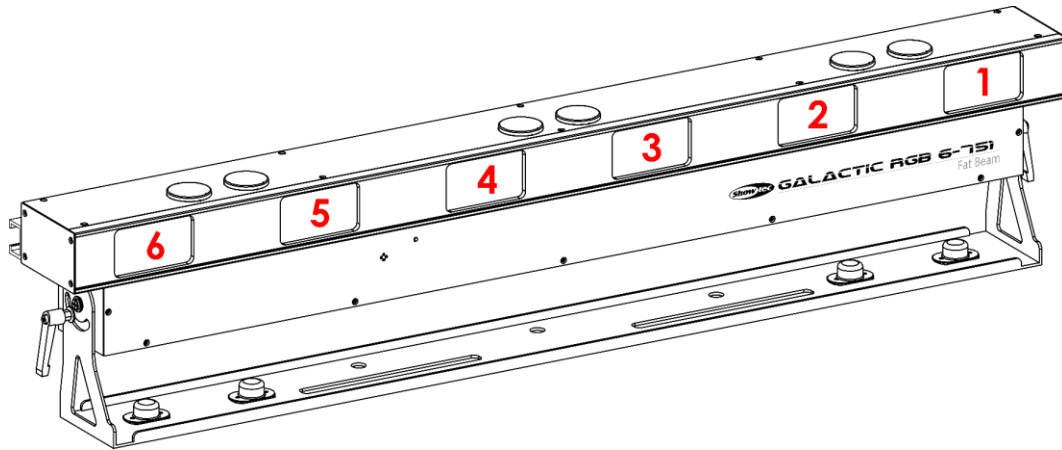


Fig. 20

The Galactic RGB-6-751 is equipped with 6 laser beam apertures.

**Note:** Make sure that the laser intensity channel(s) and laser color channels are open, in order to see the laser output. When using preset colors, it is not possible to adjust the individual laser colors (RGB).

## 6.7.1. 7 Channels, 9 Channels

7 CH	9 CH	Function	Value	Setting
	1	Laser Intensity	000–100	From low to high RGB laser intensity (0–100 %)
			101–110	Maximum RGB laser intensity (100 %)
			111–125	Default color
			126–190	Color switch (White, Red, Green, Blue, Yellow, Magenta, Cyan), from slow to fast
			191–254	Color flow, from slow to fast
			255	Color flow stop
	2	Red Laser	000–255	From low to high intensity (0–100 %)
	3	Green Laser	000–255	From low to high intensity (0–100 %)
	4	Blue Laser	000–255	From low to high intensity (0–100 %)
1		Laser Color	000–005	Blackout
			006–021	Red 100 % / Green Up / Blue 0 %
			022–037	Red Down / Green 100 % / Blue 0 %
			038–053	Red 0 % / Green 100 % / Blue Up
			054–070	Red 0 % / Green Down / Blue 100 %
			071–086	Red Up / Green 0 % / Blue 100 %
			087–100	Red 100 % / Green Up / Blue 100 %
			101–115	Default color
			116–185	Color switch (White, Red, Green, Blue, Yellow, Magenta, Cyan), from slow to fast Fixed colors must be used in combination with CH 3. Which of these colors are visible depends on the selected pattern.
			186–254	Color flow, from slow to fast
	255	Color flow stop		
2		Laser Intensity	000–255	From low to high intensity (0–100 %)
3	5	Patterns	000–255	Laser patterns (See 6.7.6.1. Pattern Selection Chart on page 42 for the list of patterns.)
4	6	Zoom	000–127	Fixed zooming, 100–5 %
			128–169	Zoom in, from slow to fast
			170–209	Zoom out, from slow to fast
			210–255	Zoom in and zoom out, from slow to fast




7 CH	9 CH	Function	Value	Setting
5	7	X Movement	000–191	192 fixed positions on the X axis
			192–223	Horizontal movement from left to right, from slow to fast
			224–255	Horizontal movement from right to left, from slow to fast
6	8	Y Movement	000–191	192 fixed positions on the Y axis
			192–223	Vertical movement down – up, from slow to fast
			224–255	Vertical movement up – down, from slow to fast
7	9	Laser Mirror	000–015	No function
			016–055	Lasers 1, 2, 3 and 4, 5, 6 mirrored on the X axis
			056–095	Lasers 1, 3, 5 and 2, 4, 6 mirrored on the X axis
			096–135	Lasers 1, 2, 3 and 4, 5, 6 mirrored on the Y axis
			136–175	Lasers 1, 3, 5 and 2, 4, 6 mirrored on the Y axis
			176–215	Lasers 1, 2, 3 and 4, 5, 6 mirrored on the X and Y axes
216–255	Lasers 1, 3, 5 and 2, 4, 6 mirrored on the X and Y axes			

**Note:** In 9-channel mode, set Laser Intensity channel (CH 1) between 0–110 for the Red/Green/Blue Laser channels to work.

### 6.7.2. 12 Channels

In CH 1 you can select the operating mode of the device. Depending on the selection made in CH 1, CH 2 has different functions in the different operating modes. The remaining channels' functions do not change.

CH	Function	Value	Setting
1	Mode Selection	000	Blackout
		001–100	Manual mode, from low to high RGB laser intensity (0–100 %)
		101–138	Default pattern color, depending on the selected pattern. (See <b>6.7.6.1. Pattern Selection Chart</b> on page 42 for the list of patterns.)
		139–177	Static colors
		178–215	Multiple colors
		216–255	Color flow speed
2	Red Laser when CH1 is set between 001–100	000–255	From low to high intensity (0–100 %)
2	Static Colors when CH1 is set between 139–177	000–036	Red
		037–073	Green
		074–110	Blue
		111–147	Yellow
		148–184	Magenta
		185–221	Cyan
		222–255	White
2	Multiple Colors when CH1 is set between 178–215	000–036	Green, Cyan, Magenta, Yellow
		037–073	Blue, Cyan, Magenta, Yellow
		074–110	White, Cyan, Magenta, Yellow
		111–147	Red, White, Cyan, Magenta
		148–184	Red, Green, White, Cyan
		185–221	Red, Green, Blue, White
		222–255	Red, Green, Blue, Yellow
2	Color Flow Speed when CH1 is set between 216–255	000–254	From slow to fast
		255	Color flow stop
3	Green Laser when CH1 is set between 001–100	000–255	From low to high intensity (0–100 %)

CH	Function	Value	Setting	
3	No Function when CH1 is set between 101-255	000-255	No function	
4	Blue Laser when CH1 is set between 001-100	000-255	From low to high intensity (0-100 %)	
4	No Function when CH1 is set between 101-255	000-255	No function	
5	Patterns	000-255	Laser patterns (See <b>6.7.6.1. Pattern Selection Chart</b> on page 42 for the list of patterns.)	
6	Zoom	000-127	Fixed zooming, 100-5 %	
		128-169	Zoom in, from slow to fast	
		170-209	Zoom out, from slow to fast	
		210-255	Zoom in and zoom out, from slow to fast	
7	Y Rotation	000-127	Fixed rotating 0-359°	
		128-191	Continuous clockwise rotation, from slow to fast	
		192-255	Continuous counterclockwise rotation, from slow to fast	
8	X Rotation	000-127	Fixed rotating 0-359°	
		128-191	Continuous clockwise rotation, from slow to fast	
		192-255	Continuous counterclockwise rotation, from slow to fast	
9	Z Rotation	000-127	Fixed rotating 0-359°	
		128-191	Continuous clockwise rotation, from slow to fast	
		192-255	Continuous counterclockwise rotation, from slow to fast	
10	X Movement	000-191	192 fixed positions on the X axis	
		192-223	Horizontal movement from left to right, from slow to fast	
		224-255	Horizontal movement from right to left, from slow to fast	
11	Y Movement	000-191	192 fixed positions on the Y axis	
		192-223	Vertical movement down – up, from slow to fast	
		224-255	Vertical movement up – down, from slow to fast	
12	Laser Mirror	000-015	No function	
		016-055	Lasers 1, 2, 3 and 4, 5, 6 mirrored on the X axis	
		056-095	Lasers 1, 3, 5 and 2, 4, 6 mirrored on the X axis	
		096-135	Lasers 1, 2, 3 and 4, 5, 6 mirrored on the Y axis	
		136-175	Lasers 1, 3, 5 and 2, 4, 6 mirrored on the Y axis	
		176-215	Lasers 1, 2, 3 and 4, 5, 6 mirrored on the X and Y axes	
		216-255	Lasers 1, 3, 5 and 2, 4, 6 mirrored on the X and Y axes	

## 6.7.3. 36 Channels




CH	Function	Value	Setting
1	<b>X Movement (Laser 1)</b>	000-255	Fixed positions on the X axis, 127 = middle
2	<b>Y Movement (Laser 1)</b>	000-255	Fixed positions on the Y axis, 127 = middle
3	<b>Laser 1</b>	000-127	Laser off
		128-255	Laser on
4	<b>Red Laser (Laser 1)</b>	000-255	From low to high intensity (0-100 %)
5	<b>Green Laser (Laser 1)</b>	000-255	From low to high intensity (0-100 %)
6	<b>Blue Laser (Laser 1)</b>	000-255	From low to high intensity (0-100 %)
7	<b>X Movement (Laser 2)</b>	000-255	Fixed positions on the X axis, 127 = middle
8	<b>Y Movement (Laser 2)</b>	000-255	Fixed positions on the Y axis, 127 = middle
9	<b>Laser 2</b>	000-127	Laser off
		128-255	Laser on
10	<b>Red Laser (Laser 2)</b>	000-255	From low to high intensity (0-100 %)
11	<b>Green Laser (Laser 2)</b>	000-255	From low to high intensity (0-100 %)
12	<b>Blue Laser (Laser 2)</b>	000-255	From low to high intensity (0-100 %)
13	<b>X Movement (Laser 3)</b>	000-255	Fixed positions on the X axis, 127 = middle
14	<b>Y Movement (Laser 3)</b>	000-255	Fixed positions on the Y axis, 127 = middle
15	<b>Laser 3</b>	000-127	Laser off
		128-255	Laser on
16	<b>Red Laser (Laser 3)</b>	000-255	From low to high intensity (0-100 %)
17	<b>Green Laser (Laser 3)</b>	000-255	From low to high intensity (0-100 %)
18	<b>Blue Laser (Laser 3)</b>	000-255	From low to high intensity (0-100 %)
19	<b>X Movement (Laser 4)</b>	000-255	Fixed positions on the X axis, 127 = middle
20	<b>Y Movement (Laser 4)</b>	000-255	Fixed positions on the Y axis, 127 = middle
21	<b>Laser 4</b>	000-127	Laser off
		128-255	Laser on
22	<b>Red Laser (Laser 4)</b>	000-255	From low to high intensity (0-100 %)
23	<b>Green Laser (Laser 4)</b>	000-255	From low to high intensity (0-100 %)
24	<b>Blue Laser (Laser 4)</b>	000-255	From low to high intensity (0-100 %)
25	<b>X Movement (Laser 5)</b>	000-255	Fixed positions on the X axis, 127 = middle
26	<b>Y Movement (Laser 5)</b>	000-255	Fixed positions on the Y axis, 127 = middle
27	<b>Laser 5</b>	000-127	Laser off
		128-255	Laser on
28	<b>Red Laser (Laser 5)</b>	000-255	From low to high intensity (0-100 %)
29	<b>Green Laser (Laser 5)</b>	000-255	From low to high intensity (0-100 %)
30	<b>Blue Laser (Laser 5)</b>	000-255	From low to high intensity (0-100 %)
31	<b>X Movement (Laser 6)</b>	000-255	Fixed positions on the X axis, 127 = middle
32	<b>Y Movement (Laser 6)</b>	000-255	Fixed positions on the Y axis, 127 = middle
33	<b>Laser 6</b>	000-127	Laser off
		128-255	Laser on
34	<b>Red Laser (Laser 6)</b>	000-255	From low to high intensity (0-100 %)
35	<b>Green Laser (Laser 6)</b>	000-255	From low to high intensity (0-100 %)
36	<b>Blue Laser (Laser 6)</b>	000-255	From low to high intensity (0-100 %)




## 6.7.4. 48 Channels

CH	Function	Value	Setting
1	Laser Intensity (Laser 1)	000–100	From low to high RGB laser intensity (0–100 %)
		101–110	Maximum RGB laser intensity (100 %)
		111–125	Default color
		126–190	Color switch (White, Red, Green, Blue, Yellow, Magenta, Cyan), from slow to fast
		191–254	Color flow, from slow to fast
		255	Color flow stop
2	Red Laser (Laser 1)	000–255	From low to high intensity (0–100 %)
3	Green Laser (Laser 1)	000–255	From low to high intensity (0–100 %)
4	Blue Laser (Laser 1)	000–255	From low to high intensity (0–100 %)
5	Patterns (Laser 1)	000–255	Laser patterns (See <b>6.7.6.1. Pattern Selection Chart</b> on page 42 for the list of patterns.)
6	Zoom (Laser 1)	000–127	Fixed zooming, 100–5 %
		128–169	Zoom in, from slow to fast
		170–209	Zoom out, from slow to fast
		210–255	Zoom in and zoom out, from slow to fast
7	X Movement (Laser 1)	000–191	192 fixed positions on the X axis
		192–223	Horizontal movement from left to right, from slow to fast
		224–255	Horizontal movement from right to left, from slow to fast
8	Y Movement (Laser 1)	000–191	192 fixed positions on the Y axis
		192–223	Vertical movement down – up, from slow to fast
		224–255	Vertical movement up – down, from slow to fast
...	...	...	...
41	Laser Intensity (Laser 6)	000–100	From low to high RGB laser intensity (0–100 %)
		101–110	Maximum RGB laser intensity (100 %)
		111–125	Default color
		126–190	Color switch (White, Red, Green, Blue, Yellow, Magenta, Cyan), from slow to fast
		191–254	Color flow, from slow to fast
		255	Color flow stop
42	Red Laser (Laser 6)	000–255	From low to high intensity (0–100 %)
43	Green Laser (Laser 6)	000–255	From low to high intensity (0–100 %)
44	Blue Laser (Laser 6)	000–255	From low to high intensity (0–100 %)
45	Patterns (Laser 6)	000–255	Laser patterns (See <b>6.7.6.1. Pattern Selection Chart</b> on page 42 for the list of patterns.)
46	Zoom (Laser 6)	000–127	Fixed zooming, 100–5 %
		128–169	Zoom in, from slow to fast
		170–209	Zoom out, from slow to fast
		210–255	Zoom in and zoom out, from slow to fast
47	X Movement (Laser 6)	000–191	192 fixed positions on the X axis
		192–223	Horizontal movement from left to right, from slow to fast
		224–255	Horizontal movement from right to left, from slow to fast
48	Y Movement (Laser 6)	000–191	192 fixed positions on the Y axis
		192–223	Vertical movement down – up, from slow to fast
		224–255	Vertical movement up – down, from slow to fast

**Note:** Set Laser Intensity channels, for each laser aperture, between 0–110 for the Red/Green/Blue Laser channels to work.




## 6.7.5. 54 Channels




CH	Function	Value	Setting	
1	Laser Color (Laser 1)	000–005	Blackout	
		006–021	Red 100 % / Green Up / Blue 0 %	
		022–037	Red Down / Green 100 % / Blue 0 %	
		038–053	Red 0 % / Green 100 % / Blue Up	
		054–070	Red 0 % / Green Down / Blue 100 %	
		071–086	Red Up / Green 0 % / Blue 100 %	
		087–100	Red 100 % / Green Up / Blue 100 %	
		101–115	Default color	
		116–185	Color switch (White, Red, Green, Blue, Yellow, Magenta, Cyan), from slow to fast Fixed colors must be used in combination with CH 3. Which of these colors are visible depends on the selected pattern.	
		186–254	Color flow, from slow to fast	
255	Color flow stop			
2	Laser Intensity (Laser 1)	000–255	From low to high intensity (0–100 %)	
3	Patterns (Laser 1)	000–255	Laser patterns (See <b>6.7.6.1. Pattern Selection Chart</b> on page 42 for the list of patterns.)	
4	Zoom (Laser 1)	000–127	Fixed zooming, 100–5 %	
		128–169	Zoom in, from slow to fast	
		170–209	Zoom out, from slow to fast	
		210–255	Zoom in and zoom out, from slow to fast	
5	Y Rotation (Laser 1)	000–127	Fixed rotating 0–359°	
		128–191	Continuous clockwise rotation, from slow to fast	
		192–255	Continuous counterclockwise rotation, from slow to fast	
6	X Rotation (Laser 1)	000–127	Fixed rotating 0–359°	
		128–191	Continuous clockwise rotation, from slow to fast	
		192–255	Continuous counterclockwise rotation, from slow to fast	
7	Z Rotation (Laser 1)	000–127	Fixed rotating 0–359°	
		128–191	Continuous clockwise rotation, from slow to fast	
		192–255	Continuous counterclockwise rotation, from slow to fast	
8	X Movement (Laser 1)	000–191	192 fixed positions on the X axis	
		192–223	Horizontal movement from left to right, from slow to fast	
		224–255	Horizontal movement from right to left, from slow to fast	
9	Y Movement (Laser 1)	000–191	192 fixed positions on the Y axis	
		192–223	Vertical movement down – up, from slow to fast	
		224–255	Vertical movement up – down, from slow to fast	
...	...	...	...	
46	Laser Color (Laser 6)	000–005	Blackout	
		006–021	Red 100 % / Green Up / Blue 0 %	
		022–037	Red Down / Green 100 % / Blue 0 %	
		038–053	Red 0 % / Green 100 % / Blue Up	
		054–070	Red 0 % / Green Down / Blue 100 %	
		071–086	Red Up / Green 0 % / Blue 100 %	
		087–100	Red 100 % / Green Up / Blue 100 %	
		101–115	Default color	
		116–185	Color switch (White, Red, Green, Blue, Yellow, Magenta, Cyan), from slow to fast	

CH	Function	Value	Setting	
			Fixed colors must be used in combination with CH 48. Which of these colors are visible depends on the selected pattern.	
		186–254	Color flow, from slow to fast	
		255	Color flow stop	
47	Laser Intensity (Laser 6)	000–255	From low to high intensity (0–100 %)	
48	Patterns (Laser 6)	000–255	Laser patterns (See <b>6.7.6.1. Pattern Selection Chart</b> on page 42 for the list of patterns.)	
49	Zoom (Laser 6)	000–127	Fixed zooming, 100–5 %	
		128–169	Zoom in, from slow to fast	
		170–209	Zoom out, from slow to fast	
		210–255	Zoom in and zoom out, from slow to fast	
50	Y Rotation (Laser 6)	000–127	Fixed rotating 0–359°	
		128–191	Continuous clockwise rotation, from slow to fast	
		192–255	Continuous counterclockwise rotation, from slow to fast	
51	X Rotation (Laser 6)	000–127	Fixed rotating 0–359°	
		128–191	Continuous clockwise rotation, from slow to fast	
		192–255	Continuous counterclockwise rotation, from slow to fast	
52	Z Rotation (Laser 6)	000–127	Fixed rotating 0–359°	
		128–191	Continuous clockwise rotation, from slow to fast	
		192–255	Continuous counterclockwise rotation, from slow to fast	
53	X Movement (Laser 6)	000–191	192 fixed positions on the X axis	
		192–223	Horizontal movement from left to right, from slow to fast	
		224–255	Horizontal movement from right to left, from slow to fast	
54	Y Movement (Laser 6)	000–191	192 fixed positions on the Y axis	
		192–223	Vertical movement down – up, from slow to fast	
		224–255	Vertical movement up – down, from slow to fast	



































## 6.7.6. 66 Channels

CH	Function	Value	Setting	
1	Laser Intensity (Laser 1)	000-100	From low to high RGB laser intensity (0-100 %)	
		101-110	Maximum RGB laser intensity (100 %)	
		111-125	Default color	
		126-190	Color switch (White, Red, Green, Blue, Yellow, Magenta, Cyan), from slow to fast	
		191-254	Color flow, from slow to fast	
		255	Color flow stop	
2	Red Laser (Laser 1)	000-255	From low to high intensity (0-100 %)	
3	Green Laser (Laser 1)	000-255	From low to high intensity (0-100 %)	
4	Blue Laser (Laser 1)	000-255	From low to high intensity (0-100 %)	
5	Patterns (Laser 1)	000-255	Laser patterns (See <b>6.7.6.1. Pattern Selection Chart</b> on page 42 for the list of patterns.)	
6	Zoom (Laser 1)	000-127	Fixed zooming, 100-5 %	
		128-169	Zoom in, from slow to fast	
		170-209	Zoom out, from slow to fast	
		210-255	Zoom in and zoom out, from slow to fast	
7	Y Rotation (Laser 1)	000-127	Fixed rotating 0-359°	
		128-191	Continuous clockwise rotation, from slow to fast	
		192-255	Continuous counterclockwise rotation, from slow to fast	
CH	Function	Value	Setting	
8	X Rotation (Laser 1)	000-127	Fixed rotating 0-359°	
		128-191	Continuous clockwise rotation, from slow to fast	
		192-255	Continuous counterclockwise rotation, from slow to fast	
9	Z Rotation (Laser 1)	000-127	Fixed rotating 0-359°	
		128-191	Continuous clockwise rotation, from slow to fast	
		192-255	Continuous counterclockwise rotation, from slow to fast	
10	X Movement (Laser 1)	000-191	192 fixed positions on the X axis	
		192-223	Horizontal movement from left to right, from slow to fast	
		224-255	Horizontal movement from right to left, from slow to fast	
11	Y Movement (Laser 1)	000-191	192 fixed positions on the Y axis	
		192-223	Vertical movement down – up, from slow to fast	
		224-255	Vertical movement up – down, from slow to fast	
...	...	...	...	
56	Laser Intensity (Laser 6)	000-100	From low to high RGB laser intensity (0-100 %)	
		101-110	Maximum RGB laser intensity (100 %)	
		111-125	Default color	
		126-190	Color switch (White, Red, Green, Blue, Yellow, Magenta, Cyan), from slow to fast	
		191-254	Color flow, from slow to fast	
		255	Color flow stop	
57	Red Laser (Laser 6)	000-255	From low to high intensity (0-100 %)	
58	Green Laser (Laser 6)	000-255	From low to high intensity (0-100 %)	
59	Blue Laser (Laser 6)	000-255	From low to high intensity (0-100 %)	
60	Patterns (Laser 6)	000-255	Laser patterns (See <b>6.7.6.1. Pattern Selection Chart</b> on page 42 for the list of patterns.)	
61	Zoom (Laser 6)	000-127	Fixed zooming, 100-5 %	
		128-169	Zoom in, from slow to fast	
		170-209	Zoom out, from slow to fast	

CH	Function	Value	Setting	
		210–255	Zoom in and zoom out, from slow to fast	
62	Y Rotation (Laser 6)	000–127	Fixed rotating 0–359°	
		128–191	Continuous clockwise rotation, from slow to fast	
		192–255	Continuous counterclockwise rotation, from slow to fast	
63	X Rotation (Laser 6)	000–127	Fixed rotating 0–359°	
		128–191	Continuous clockwise rotation, from slow to fast	
		192–255	Continuous counterclockwise rotation, from slow to fast	
64	Z Rotation (Laser 6)	000–127	Fixed rotating 0–359°	
		128–191	Continuous clockwise rotation, from slow to fast	
		192–255	Continuous counterclockwise rotation, from slow to fast	
65	X Movement (Laser 6)	000–191	192 fixed positions on the X axis	
		192–223	Horizontal movement from left to right, from slow to fast	
		224–255	Horizontal movement from right to left, from slow to fast	
66	Y Movement (Laser 6)	000–191	192 fixed positions on the Y axis	
		192–223	Vertical movement down – up, from slow to fast	
		224–255	Vertical movement up – down, from slow to fast	

**Note:** Set Laser Intensity channels, for each laser aperture, between 0–110 for the Red/Green/Blue Laser channels to work.

## 6.7.6.1. Pattern Selection Chart

0 - 7 1 	64 - 71 9 	128 - 135 17 	192 - 199 25 
8 - 15 2 	72 - 79 10 	136 - 143 18 	200 - 207 26 
16 - 23 3 	80 - 87 11 	144 - 151 19 	208 - 215 27 
24 - 31 4 	88 - 95 12 	152 - 159 20 	216 - 223 28 
32 - 39 5 	96 - 103 13 	160 - 167 21 	224 - 231 29 
40 - 47 6 	104 - 111 14 	168 - 175 22 	232 - 239 30 
48 - 55 7 	112 - 119 15 	176 - 183 23 	240 - 247 31 
56 - 63 8 	120 - 127 16 	184 - 191 24 	248 - 255 32 

## 7. Troubleshooting

This troubleshooting guide contains actions which can be carried out by the user. The device does not contain user-serviceable parts.

Unauthorized modifications to the device will render the warranty void. Such modifications may result in injuries and material damage.

Refer servicing to instructed or skilled persons. Contact your Highlite International dealer in case the solution is not described in the table.

Problem	Probable cause(s)	Solution
The device does not power up	No power to the device	<ul style="list-style-type: none"> <li>Check if power is switched on and cables are plugged in</li> </ul>
	Main fuse is blown	<ul style="list-style-type: none"> <li>Replace the fuse. See <b>8.3.1. Replacing the Fuse</b> on page 45</li> </ul>
The device does not produce a laser projection	The key switch is not in ON position	<ul style="list-style-type: none"> <li>Insert the key and turn it to ON position. See <b>2.4. Safety Devices</b> on page 9</li> </ul>
	The remote interlock or the test connector is not connected	<ul style="list-style-type: none"> <li>Connect the remote interlock or the test connector. See <b>2.4. Safety Devices</b> on page 9</li> </ul>
The device responds erratically	The factory settings of the device are changed	<ul style="list-style-type: none"> <li>Reset the device's parameters to the default factory settings. See <b>6.6.6. Setup</b> on pages 31–32</li> </ul>
The device does not respond to DMX control	The controller is not connected	<ul style="list-style-type: none"> <li>Connect the controller</li> </ul>
	The device is not in DMX mode	<ul style="list-style-type: none"> <li>Activate DMX mode from the main menu</li> </ul>
	The signal is reversed. The 3-pin/5-pin DMX OUT of the controller does not match the DMX IN of the device	<ul style="list-style-type: none"> <li>Install a phase-reversing cable between the controller and the device</li> </ul>
	The controller is defective	<ul style="list-style-type: none"> <li>Try using another controller</li> </ul>
The device responds erratically to DMX control	Bad data link connection	<ul style="list-style-type: none"> <li>Examine connections and cables. Correct poor connections. Repair or replace damaged cables</li> </ul>
	The data link is not terminated with a 120 $\Omega$ termination plug	<ul style="list-style-type: none"> <li>Insert a termination plug in the DMX OUT connector of the last device on the link</li> </ul>
	Incorrect addressing	<ul style="list-style-type: none"> <li>Check address settings and correct, if necessary</li> </ul>
	In case of a setup with multiple devices, one of the devices is defective and disturbs data transmission on the link	<ul style="list-style-type: none"> <li>To find out which is the defective device, bypass one device at a time until normal operation is restored</li> </ul>

## 8. Maintenance

### 8.1. Safety Instructions for Maintenance



**DANGER**  
Electric shock caused by dangerous voltage inside

Disconnect power supply before servicing or cleaning.



**WARNING**  
Laser radiation  
Avoid exposure to beam.

This device is a class 3B laser device according to the classification in NEN-EN-IEC 60825-1:2014.

Maintenance can be carried out by instructed or skilled persons. Service shall be carried out only by skilled persons. Contact your Highlite International dealer for more information.

### 8.2. Preventive Maintenance



**Attention**  
Before each use, examine the device visually for any defects.

Make sure that:

- All screws used for installing the device or parts of the device are tightly fastened and are not corroded.
- The safety devices are not damaged.
- There are no deformations on housings, fixations and installation points.
- The lens is not cracked or damaged.
- The power cables are not damaged and do not show any material fatigue.

#### 8.2.1. Basic Cleaning Instructions



**WARNING**  
Laser radiation  
Avoid exposure to beam

To avoid laser emission, remove the key before cleaning the device.

The external lens of the device must be cleaned periodically in order to optimize the laser output. The cleaning schedule depends on the conditions at the site where the device is installed. When smoke or fog machines are used at the site, the device will need more frequent cleaning. On the other hand, if the device is installed in well-ventilated area, it will need less frequent cleaning. To establish a cleaning schedule, examine the device at regular intervals during the first 100 hours of operation.

To clean the device, follow the steps below:

- 01) Disconnect the device from the electrical power supply.
- 02) Allow the device to cool down for at least 15 minutes.
- 03) Remove the dust collected on the external surface with dry compressed air and a soft brush.
- 04) Clean the lens with a damp cloth. Use a mild detergent solution.

- 05) Dry the lens carefully with a lint-free cloth.
- 06) Clean the DMX and other connections with a damp cloth.



### Attention

- Do not immerse the device in liquid.
- Do not use alcohol or solvents.
- Make sure that the connections are fully dry before connecting the device to the power supply and to other devices.

## 8.3. Corrective Maintenance

The device does not contain user-serviceable parts. Do not open the device and do not modify the device.

Refer repairs and servicing to skilled persons. Contact your Highlite International dealer for more information.

### 8.3.1. Replacing the Fuse



### DANGER Electric shock caused by short-circuit

- Do not bypass the thermostatic switch or fuses.
- For replacement use fuses of the same type and rating only.

Power surges, short-circuit or incorrect electrical power supply may cause a fuse to burn out. If the fuse burns out, the device will not function anymore. If this happens, follow the steps below.

- 01) Disconnect the device from the electrical power supply.
- 02) Allow the device to cool down for at least 15 minutes.
- 03) Loosen the fuse cover with a screwdriver and remove the fuse holder.
- 04) If the fuse is brown or unclear, it is burned out. Remove the old fuse.
- 05) Insert a new fuse in the fuse holder. Make sure that the type and the rating of the replacement fuse are the same as the ones specified on the information label of the product.
- 06) Replace the fuse holder in the opening and tighten the fuse cover.

## 9. Deinstallation, Transportation and Storage

---

### 9.1. Instructions for Deinstallation



**WARNING**

**Incorrect deinstallation can cause serious injuries and damage of property.**

- Let the device cool down before dismounting.
- Disconnect power supply before deinstallation.
- Always observe the national and site-specific regulations during deinstallation and derigging of the device.
- Wear personal protective equipment in compliance with the national and site-specific regulations.

### 9.2. Instructions for Transportation

- Use the original packaging to transport the device, if possible.
- Always observe the handling instructions printed on the outer carton box, for example: "Handle with care", "This side up", "Fragile".

### 9.3. Storage

- Clean the device before storing. Follow the cleaning instructions in chapter **8.2.1. Basic Cleaning Instructions** on page 44.
- Store the device in the original packaging, if possible.

## 10. Disposal

---

### Correct disposal of this product



#### Waste Electrical and Electronic Equipment

This symbol on the product, its packaging or documents indicates that the product shall not be treated as household waste. Dispose of this product by handing it to the respective collection point for recycling of electrical and electronic equipment. This is to avoid environmental damage or personal injury due to uncontrolled waste disposal. For more detailed information about recycling of this product contact the local authorities or the authorized dealer.

## 11. Approval

---



Check the respective product page on the website of Highlite International ([www.highlite.com](http://www.highlite.com)) for an available declaration of conformity.

This product is in compliance with IEC60825-1:2014.



©2023 Showtec